

3gfZadeW 6 [efd]Tgfade,Ž

ASH & ALAIN INDIA PVT LTD

S-100, F.I.E.E., Okhla Industrial Area, Phase-ii, New Delhi-110020(India)

Tel : 011-43797575 Fax : 011-43797574 E-mail : sales@ashalain.com

OMRON

Programmable Terminals

NS Series

NS, the HMI brand you can rely on



» Proven Reliability

» Best Match

» Machine Management

realizing

Machine Control at Your Fingertips. On-screen Machine Management.

Expanding markets in emerging countries, short product cycles, and diversifying customer needs are just some of the factors that create drastic changes for the production industry.

To win in severe global market competition, you have to continue to grasp industry changes quickly, understand user needs accurately, and provide diverse forms of added value.

OMRON will help you handle ever-changing customer needs with the three keywords of the NS Series.

Let Your Machines Evolve

Best Match

OMRON has provided even greater compatibility with OMRON PLCs and components to provide an advanced design process that lets you achieve appealing machines.

Machine Management

The NS Series transforms machine HMIs from simple operation panels and turns them into machine management tools.


Proven Reliability

The NS-series PTs have a proven track record that will take your machines to a higher level of reliability.

NS


Series



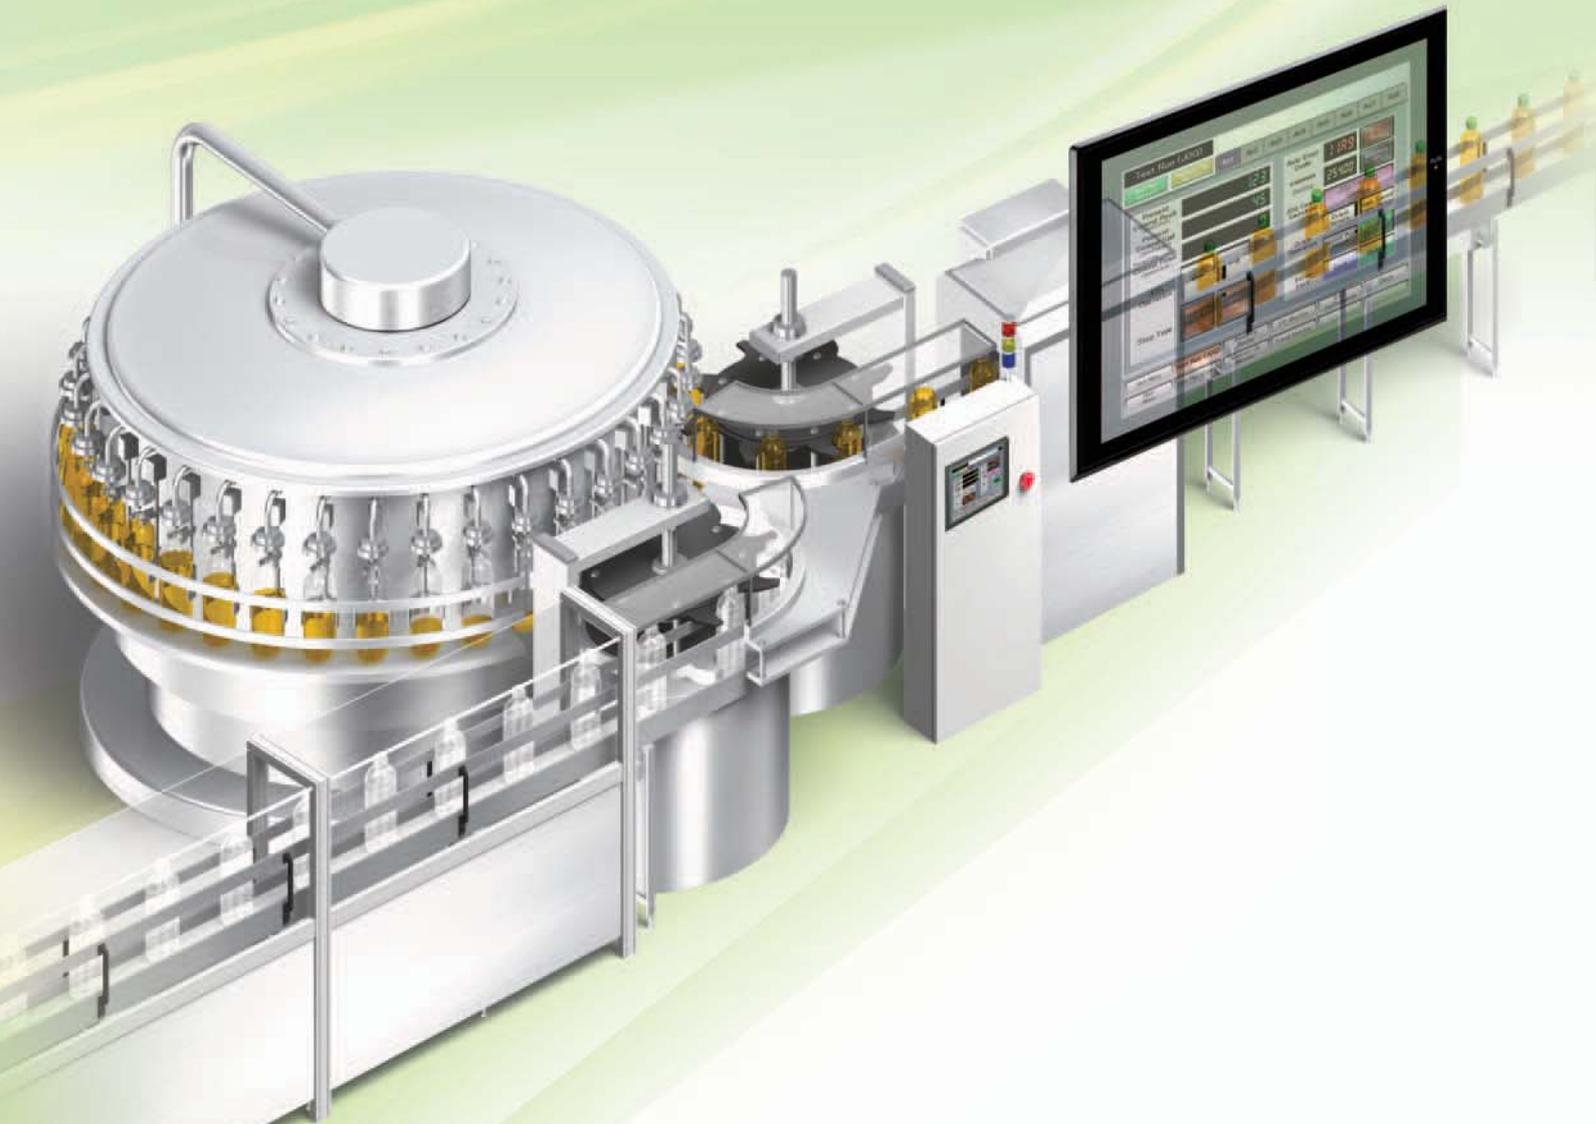

The Best Match Possible

The amount of work and cost of connecting to OMRON PLCs and components have been greatly reduced. The results is an incredible range of features that is possible only when unifying to one manufacturer. Connecting to the NJ-series Machine Automation Controller allows the machine designer to quickly achieve the features required by the user through support for improved troubleshooting and structured programming with structures and other new data types.

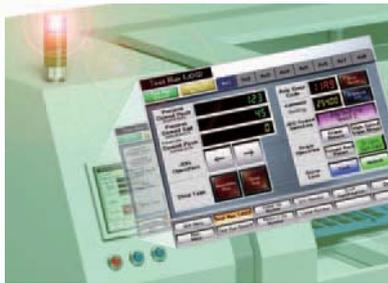

Machine Management Tool

The machine designer can easily implement PLC troubleshooting, machine troubleshooting, settings for servo drives, temperature controllers, and other control components, status monitoring of connected devices, and uploading/downloading of parameters.



Proven Reliability

In the ten years since initial marketing, OMRON has globally supplied numerous HMI solutions with the highly reliable NS Series at over 200 sales and service centers around the world.

NS Series Lineup

This powerful lineup showcases OMRON's unique value.

Choose from 3 types to match your application and requirements.

NS Series

Standard Models

Plentiful screen variations and diverse functions allow use in a wide variety of applications.

15 inches Color TFT



NS15-TX

- || 32,768 colors
- || XGA 1024 x 768 pixels
- || Screen memory size: 60 MB
- USB Slave Controller Link
- Ethernet Video (RGB input only)
- USB Master RGB output
- RS-232C x 2 Ladder Monitor
- RS-422A/485 Memory Card

12.1 inches Color TFT



NS12-TS

- || 32,768 colors
- || SVGA 800 x 600 pixels
- || Screen memory size: 60 MB
- USB Slave Controller Link
- Ethernet Video
- USB Master Ladder Monitor
- RS-232C x 2 Memory Card

10.4 inches Color TFT



NS10-TV

- || 32,768 colors
- || VGA 640 x 480 pixels
- || Screen memory size: 60 MB
- USB Slave Controller Link
- Ethernet Video
- USB Master Ladder Monitor
- RS-232C x 2 Memory Card

8.4 inches Color TFT



NS8-TV

- || 32,768 colors
- || VGA 640 x 480 pixels
- || Screen memory size: 60 MB
- USB Slave Video
- Ethernet Ladder Monitor
- USB Master Memory Card
- RS-232C x 2

5.7 inches Color High-luminance TFT



NS5-TQ

- || 32,768 colors
- || QVGA 320 x 240 pixels
- || Screen memory size: 60 MB
- USB Slave
- Ethernet
- RS-232C x 2
- Memory Card

5.7 inches Color TFT



NS5-SQ

- || 32,768 colors
- || QVGA 320 x 240 pixels
- || Screen memory size: 60 MB
- USB Slave
- Ethernet
- RS-232C x 2
- Memory Card

5.7 inches Monochrome STN



NS5-MQ

- || 16 monochrome gradations
- || QVGA 320 x 240 pixels
- || Screen memory size: 60 MB
- USB Slave
- Ethernet
- RS-232C x 2
- Memory Card

NSH Series

Hand-held Models

A hand-held version of the NS5 is now available to perform operations at the production site.

5.7 inches Color TFT



NSH5-SQR

- || 32,768 colors
- || QVGA 320 x 240 pixels
- USB Slave
- RS-232C/422A
- Memory Card

- || Equipped with a red switch for an emergency stop input.
- || Emergency stop (3 inputs)

5.7 inches Color TFT



NSH5-SQG

- || 32,768 colors
- || QVGA 320 x 240 pixels
- USB Slave
- RS-232C/422A
- Memory Card

- || Equipped with a gray switch for a stop input.
- || Emergency stop (3 inputs)

Hand-held PT Cable



RS-232C RS-422A

NSJ Series

Integrated Controller Models

PT is unified with the Controller into one package to greatly help standardize equipment and reduce size.

12.1 inches

Color TFT



NSJ12-TS□□-G5D

- || 32,768 colors
- || SVGA 800 x 600 pixels
- || Screen memory size: 60 MB

USB Slave Controller Link
 Ethernet Ladder Monitor
 USB Master Memory Card
 RS-232C x 3 DeviceNet

(Controller Section)

- || I/O points: 1,280
- || Program capacity: 60K steps
- || Data Memory: 128K words

10.4 inches

Color TFT



NSJ10-TV□□-G5D

- || 32,768 colors
- || VGA 640 x 480 pixels
- || Screen memory size: 60 MB

USB Slave Controller Link
 Ethernet Ladder Monitor
 USB Master Memory Card
 RS-232C x 3 DeviceNet

(Controller Section)

- || I/O points: 1,280
- || Program capacity: 60K steps
- || Data Memory: 128K words

8.4 inches

Color TFT



NSJ8-TV□□-M3D

- || 32,768 colors
- || VGA 640 x 480 pixels
- || Screen memory size: 60 MB

USB Slave Controller Link
 Ethernet Ladder Monitor
 USB Master Memory Card
 RS-232C x 3 DeviceNet

(Controller Section)

- || I/O points: 640
- || Program capacity: 20K steps
- || Data Memory: 32K words

8.4 inches

Color TFT



NSJ8-TV□□-G5D

- || 32,768 colors
- || VGA 640 x 480 pixels
- || Screen memory size: 60 MB

USB Slave Controller Link
 Ethernet Ladder Monitor
 USB Master Memory Card
 RS-232C x 3 DeviceNet

(Controller Section)

- || I/O points: 1,280
- || Program capacity: 60K steps
- || Data Memory: 128K words

5.7 inches

Color TFT



NSJ5-SQ□□-M3D/-G5D

- || 32,768 colors
- || QVGA 320 x 240 pixels
- || Screen memory size: 60 MB

USB Slave Controller Link
 Ethernet Memory Card
 RS-232C x 3 DeviceNet

(Controller Section)

- | | |
|-----------------------------|-----------------------------|
| M3D | G5D |
| I/O points: 640 | I/O points: 1280 |
| Program capacity: 20K steps | Program capacity: 60K steps |
| Data Memory: 32K words | Data Memory: 128K words |

5.7 inches

Color High-luminance TFT



NSJ5-TQ□□-M3D/-G5D

- || 32,768 colors
- || QVGA 320 x 240 pixels
- || Screen memory size: 60 MB

USB Slave Controller Link
 Ethernet Memory Card
 RS-232C x 3 DeviceNet

(Controller Section)

- | | |
|-----------------------------|-----------------------------|
| M3D | G5D |
| I/O points: 640 | I/O points: 1280 |
| Program capacity: 20K steps | Program capacity: 60K steps |
| Data Memory: 32K words | Data Memory: 128K words |

Software

CX-Designer



Without screen creation and ladder programming, the CX-Designer Screen Design Software is so easy-to-use that anyone can master it.

NS-Runtime



This software enables PLC communications from a personal computer by manipulating PT screens created using the CX-Designer.

A Revolutionary Best Ma

The NS-series PTs provide revolutionary compatibility with the road-proven CS/CJ-series the new NJ-series Controllers to achieve even greater added value in user machines.



The NJ-series Machine Automation Controllers Revolutionize Productivity

You can create a flexible, high-speed, high-precision system based on the NJ-series Machine Automation Controllers. Use tags to access any memory areas, or troubleshoot machines and systems by using the NS-series PTs to make the most of the strengths of the NJ-series Controllers and to manage machines.

EtherNet/IP



EtherCAT



The CS/CJ-series PLCs for the Reliability of a Proven Track Record

Features are provided to easily connect to CS/CJ-series PLCs to take advantage of their proven track record.

Many features that do not require screen creation or programming support everything from design through maintenance to take advantage of the compatibility of OMRON PLCs and PT and to serve as the face of your machines.



CS/CJ



Power Support for All User

From conceptual designs through commissioning, operation, and maintenance, the NS

Design

Reduced work




Troubleshooter

P10-P11

NJ Troubleshooter

PLC Troubleshooter

Machine Troubleshooter

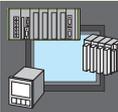

Best Match with OMRON Products

P12-P16

Smart Active Parts (SAP)

With EtherNet/IP

Direct Connection to Temperature Controllers

Face Plate Auto-Builder for NS



Plentiful Graphing Functions

P19



Screen Data Security Functions

P20



Multi-language Support

P17



Device Data Transfer

P20



Multifunction Objects

P18



Beauty Screens and Objects

P21



CX-Designer Screen Design Software

P22-P25

Needs

Series supports every user need.

Startup/Operation

Attractive, convenient features for easier operation



Level:01
Level:02
Level:03
Level:04
Level:05

analog RGB

x4 CAMERA 260,000-color Video Display *P26*

analog RGB Analog RGB Output *P26*

FTP Function *P27*

Level:01
Level:02
Level:03
Level:04
Level:05 **User Security Functions** *P27*

Maintenance

Features for reliability and complete maintenance



SPMA Single Port Multi Access *P28*

PLC Data Trace *P29*

Operating log *P29*

Ladder Monitor *P30-P31*

Design

Troubleshooter

A Troubleshooter is provided for the connected OMRON Controller or PLC. This greatly reduces work requirements.

NJ Troubleshooter


Controller Errors

Standard Feature for NJ-series Controllers

Errors are automatically detected and displayed on-screen along with corrective actions for the CPU Unit function modules, EtherCAT slaves, and CJ-series Units that are connected in the NJ-series Controller. Whenever an error might occur, you can recover normal operation quickly to reduce downtime without using user manuals or Support Software on a computer.



NJ Controller

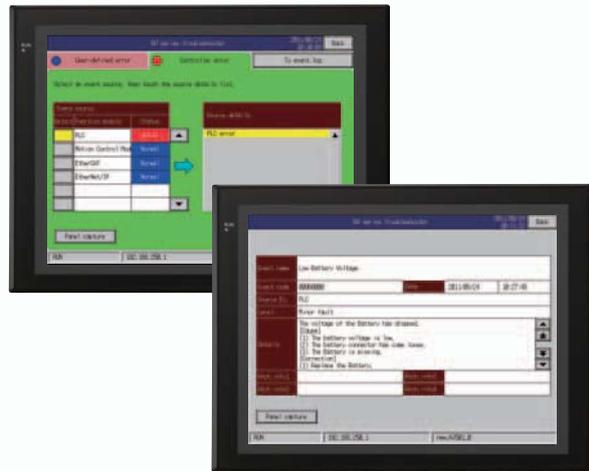

User-defined Errors

No Work Is Required to Create Alarm Screens.

Frames for alarm screens are provided as standard features in the NS-series PTs. You do not need to create screens to complete alarm screens.

Management of the meanings of alarms is unified on the Controller, so you do not have to register, add, or correct addresses on the NS-series PTs.

No screen creation is required



Excel
Alarm Specifications

Copy and Paste



Sysmac Studio

Transfer

Alarm Registration and Programming Detection Conditions



NJ Controller

Unified Alarm Definitions


Alarms displayed.



CS/CJ-series PLC Troubleshooter

Constantly monitors PLC errors.

Automatically detects PLC errors and displays the error details and recovery procedure on the screen. Even if a problem occurs, it can be resolved quickly without referring to the manuals.

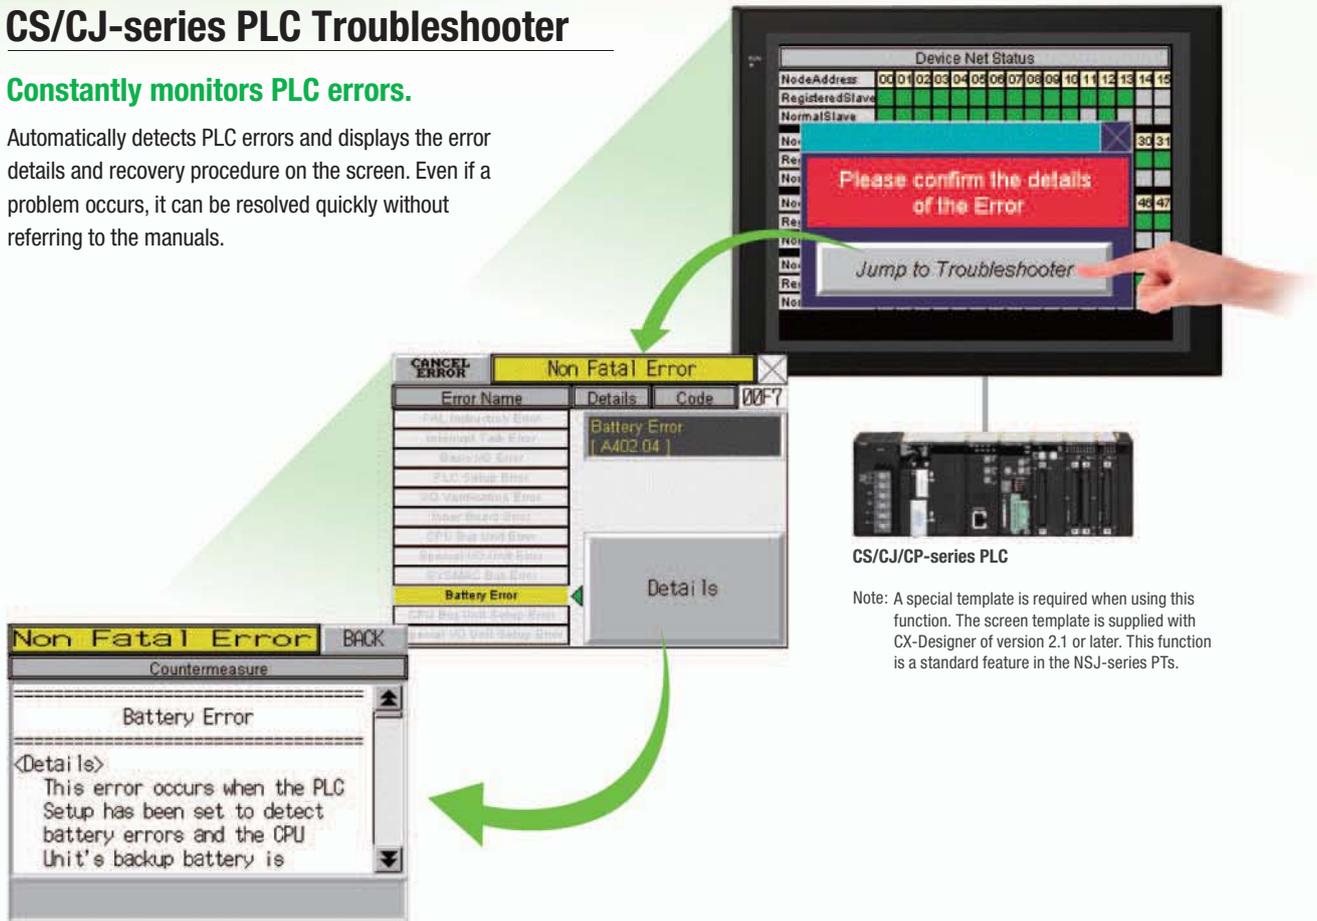


CS/GJ/CP-series PLC

Note: A special template is required when using this function. The screen template is supplied with CX-Designer of version 2.1 or later. This function is a standard feature in the NSJ-series PTs.

Machine Troubleshooter

Easier Design of Machine Error Screens

Individual error screens that were previously made for each error can now be integrated into one. It is possible to switch only the error details (text and screen) without ladder programming in conjunction with the alarm bit.

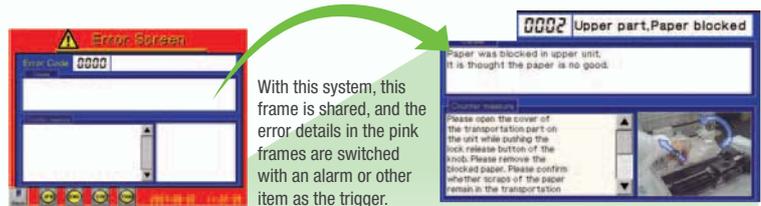

With this system, this frame is shared, and the error details in the pink frames are switched with an alarm or other item as the trigger.

Specific Example

in conjunction with an alarm bit (See note.)

Alarm bit 10.01 ON (no paper) →

Text selection

Counter measure

Please draw out tray 1 forward. Please set a new paper in the direction like photo. Please the paper diagonally must not be set or not use the distorted paper, and the paper blocking might not be generated and not use.

Image selection

Alarm bit 10.02 ON (printing error) →

Counter measure

The dirt of the reading part is thought. Please clean the reading part glass by using alcohol and the cotton waste in the maintenance box. Please exchange the reading units when not improving it even if it cleans it.

Note: Alarms, PLC/PT memory, and other items can be selected for the switching trigger.

Design


Best Match with OMRON Products

NS Series is the most suitable HMI for the system that comprises OMRON components. The advantage is the "compatibility (reducing programming and screen data creation work)" which will reduce the amount of designing work.


NS




No Screen Designing / No Programming

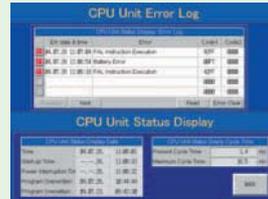


PLC CPU Unit monitoring screen

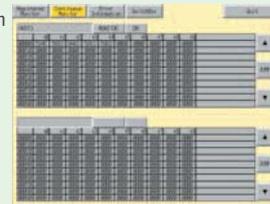

Device monitor

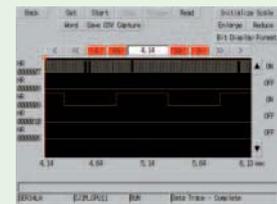

PLC Data Trace

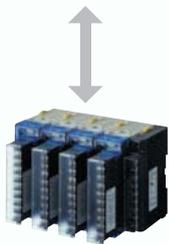

Temperature Controllers



PLC

CPU Bus Units and Special I/O Units

- SAP Library
- Troubleshooting



Remote I/O Terminal



Inverter



Vision Sensor

- 260,000-color video input



Temperature Controllers



Servomotor Servo Driver




Design

EtherNet/IP

Support for data structures


This special feature is made possible by combining an OMRON CJ2 PLC with an NS-series PT. The data structures that you define on the Programming Tool can be used on the CX-Designer simply by dragging and dropping them.

Note: An EtherNet/IP connection is required.
 For CJ2 Series, CX-Designer version 3.2 or later, and NS system version 8.4 or later are required.
 For NJ Series, CX-Designer version 3.3 or later, and NS system version 8.5 or later are required. Moreover, the multidimensional array is supported in the combination with NJ.

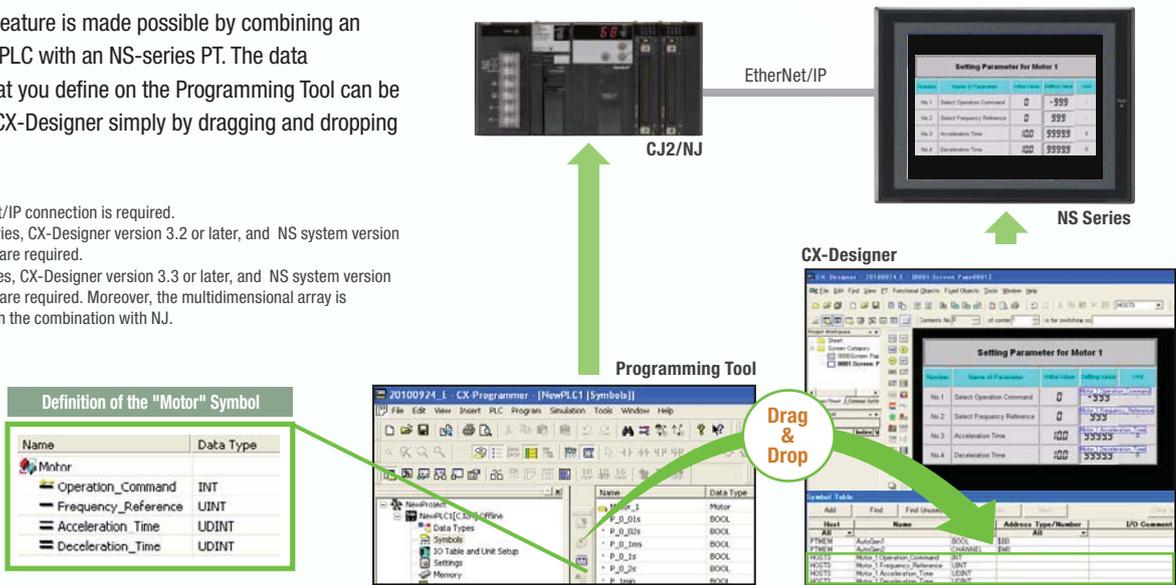

Tag access



A tag is a name given to an address. Tags are managed in the CJ2 CPU Unit, where they are defined as network symbols. The common user-defined tag names are used from Programmable Terminals and host applications to access memory in a CJ2 CPU Unit without knowing the physical address.

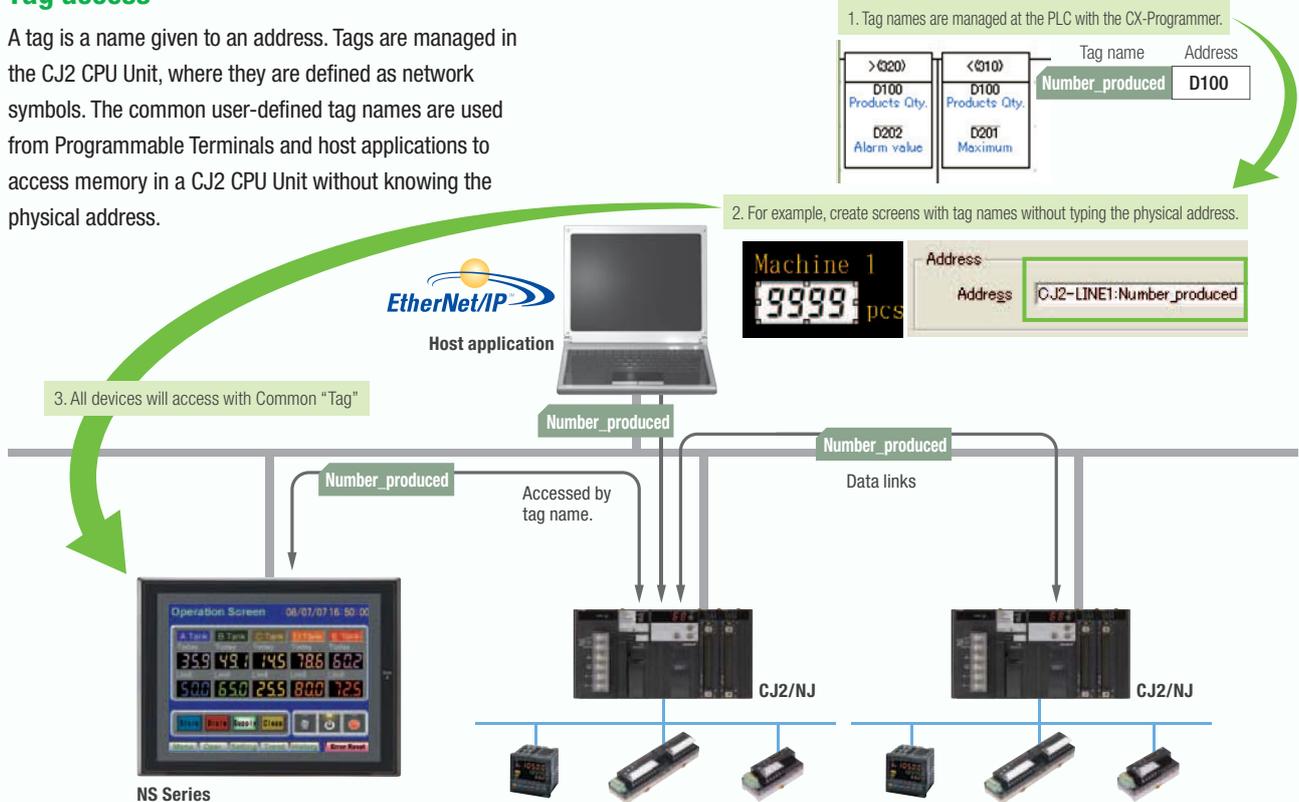




Simultaneous and parallel engineering

The host applications can be designed using the tag names of the PLC and PT. Parallel development will shorten the design time.

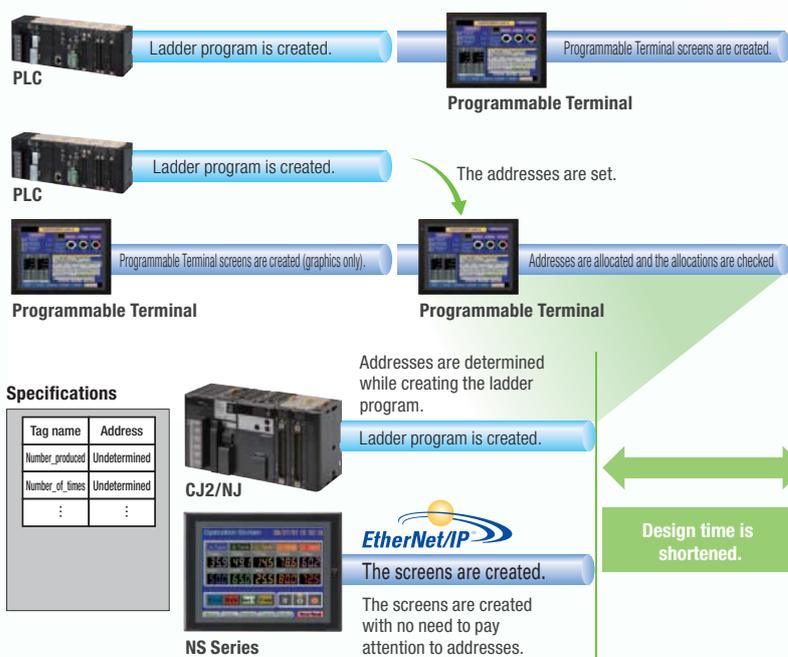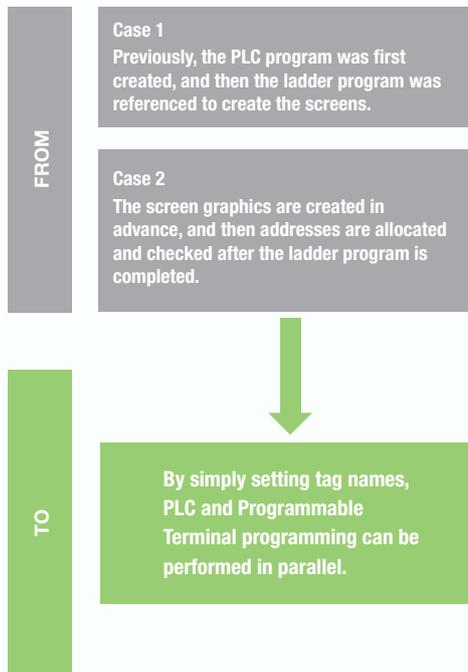

Minimize side effect of address changes

It is possible to access memory with tags, so the PT and host application are not affected even if the address of data in the PLC is changed.

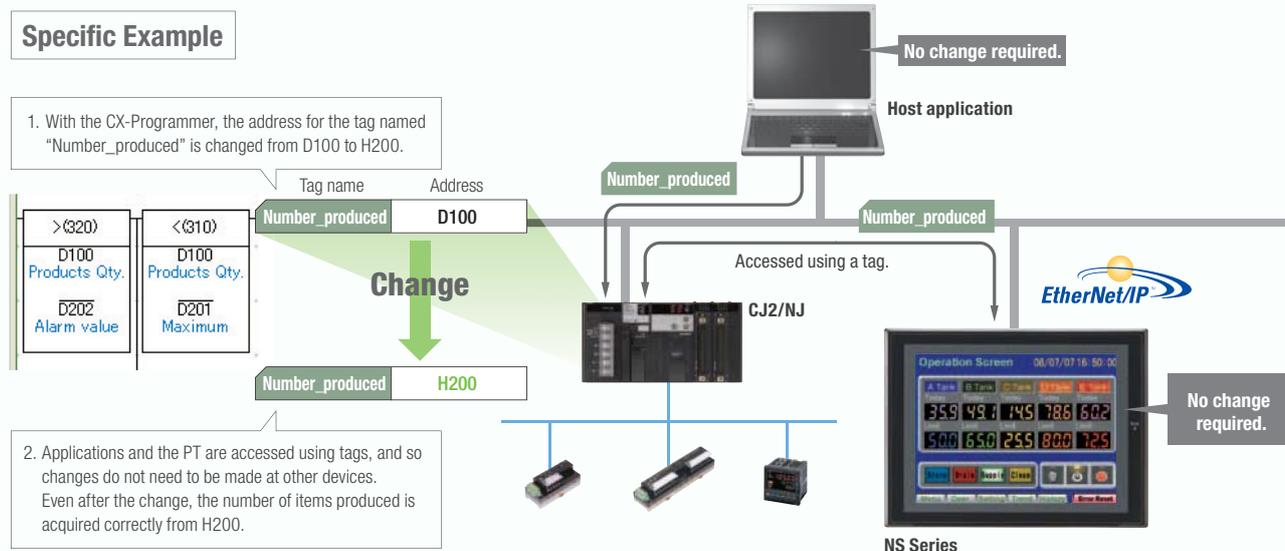


Design
Startup/Operation
Maintenance
NS-RunTime
Hand-held P.T.
Features
Network
System Configuration
Ordering Information
Specifications

Direct Connection to Temperature Controllers

Connect OMRON Temperature Controllers directly to the NS-series PT.

OMRON Temperature Controllers can be connected directly to the NS-series PT's RS-232C port. Data does not pass through the PLC, so ladder programming is not required. Also, there are plenty of objects in the SAP Library for Temperature Controllers, and Temperature Controller screens can be created easily just by pasting objects from the SAP Library to the screens.

Note: An RS-422A Serial Adapter is needed to connect directly to a Temperature Controller. Refer to page 53 for a list of the Temperature Controllers that can be connected. A Conversion Unit is not required to connect to the RS-422A/485 serial interface of the NS15.

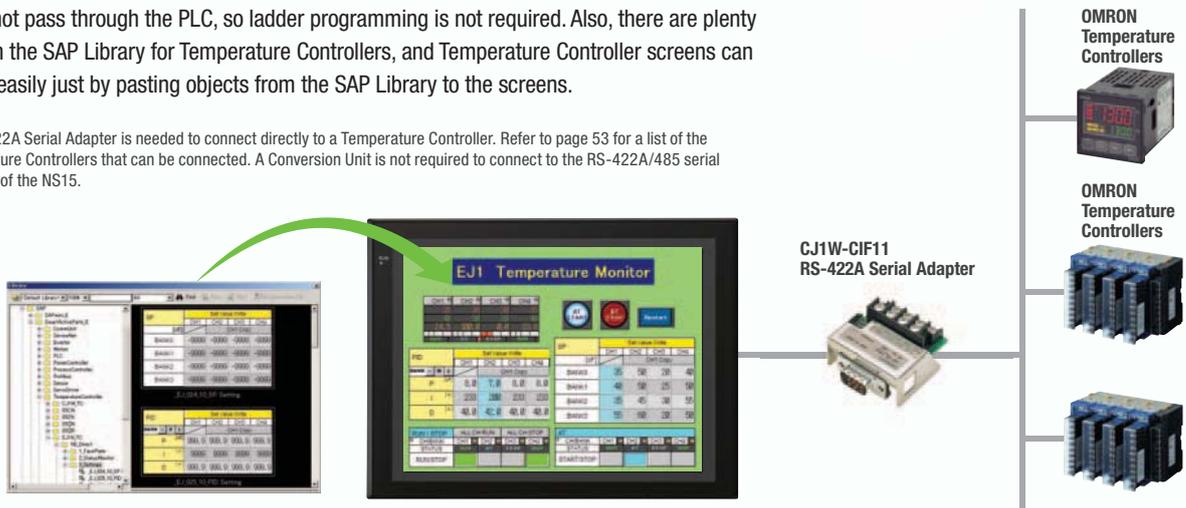

Face Plate Auto-Builder for NS


Screens for Loop Controllers can be easily and automatically created.

Significantly reduces the effort required to combine a Loop Controller with an NS-series PT.


Easy automatic generation of faceplates, such as faceplates for PV monitoring and SV setting, as well as tuning screens, such as screens to set and autotune PID constants.

A total of 17 function blocks are supported, with eleven function blocks, such as Ratio Setting and Motor Manipulators newly supported (version 3 of higher).

Comments are automatically entered for automatically assigned unit and scale settings when a project is generated (version 3 and higher).

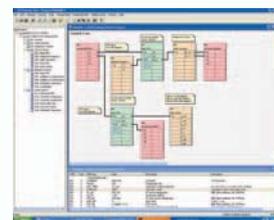

CX-Process Tool
(Loop Controller Programming Software)
● Loop Controller program creation (function block method)
● CSV tag file output

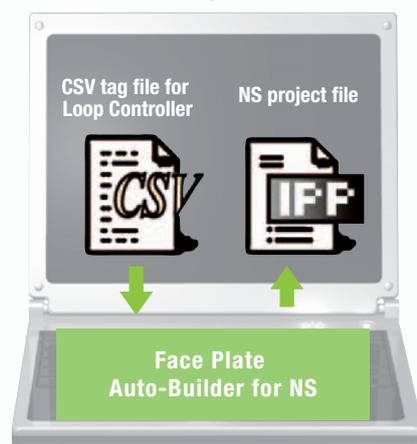

Created screens are easily transferred to the NS by using a Memory Card or over the network.



CX-Designer
(NS screen creation software)
● Editing created data
● Creation of other required screens

Note: Refer to the PLC-based Process Control Catalog (Cat. No. P051) and the Loop-control CPU Unit Catalog (Cat. No. R128) for details on Loop Controllers.

Multi-language Support

Support 42 languages and switch the language of the labels among up to 16 languages.

Unicode is supported and 42 Asian and European languages can be combined in screens. Also, it is possible to switch between up to 16 labels using the label switching function, so it is possible to support up to 16 languages in a single screen just by specifying the language to be displayed in each label.

NS Series




Multi-language CSV data

| Label | Chinese | Japanese | English |
|--------------------|---------|----------|------------------------|
| Setting Screen | 設定画面 | 設定画面 | Setting of the Screen |
| Working Time | 作業時間 | 作業時間 | Overriding the Name |
| TARGET | 目標値 | 目標値 | ZEL |
| ALARM MAX | 警報上限値 | 警報上限値 | WARNING MAXIMUM |
| ALARM MIN | 警報下限値 | 警報下限値 | WARNING MINUTE |
| OPERATION QUANTITY | 稼働数量設定 | 稼働数量設定 | BEFORE QUANTITY |
| MAXIMAL OPERATION | 手動稼働数量 | 手動稼働数量 | HANDCER REED |
| OPERATION MAX | 稼働数量上限値 | 稼働数量上限値 | BEFORE MAXIMUM |
| OPERATION MIN | 稼働数量下限値 | 稼働数量下限値 | BEFORE MINIMUM |
| Pulse | 脈動 | 脈動 | Impulse |
| Pulse | 脈動 | 脈動 | Impulse |
| Pulse | 脈動 | 脈動 | Impulse |
| Pulse | 脈動 | 脈動 | Impulse |
| Pulse | 脈動 | 脈動 | Impulse |
| PAUSE STOP | 停止/手続 | 停止/手続 | Impulse |
| AUTOMANUAL | 自動/手続 | 自動/手続 | ALT DRIBTSCHIV/MANUELL |
| INITIALIZE | 設定値初期化 | 設定値初期化 | INITIALISIEREN |


The labels' text attributes can also be reflected when importing.

When screen data is imported, text attributes can be applied to the specified labels and attributes such as the font and text color can be reflected to other languages labels.

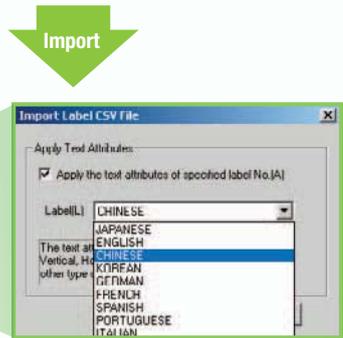

Multi-language conversion has become much easier.


The screen data in the source language is exported to a CSV file and sent to a translation agency by e-mail for translation. Later, the translated CSV file is just imported to easily provide multi-language support.

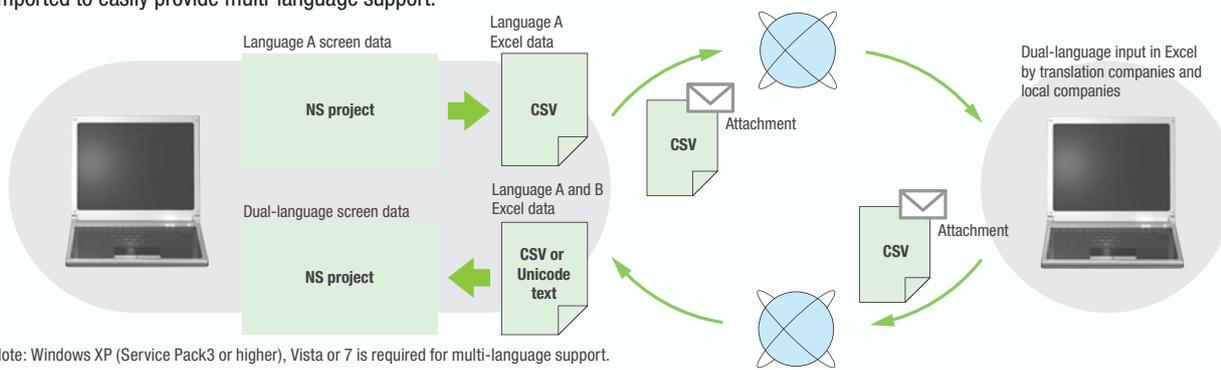

Note: Windows XP (Service Pack3 or higher), Vista or 7 is required for multi-language support.

Multi-language System Messages. Eight Languages Supported as Standard Feature

The system program of NS-series PTs supports Chinese and European languages. All eight languages are a standard feature, including Chinese (traditional and simplified), Spanish, Italian, German, and French, in addition to the previous Japanese and English. Along with maintenance menus, messages for communications errors, communications settings, and screen transfers can be displayed in any of eight languages. Maintenance can be performed in the desired language. The language can be easily set using the NS-series PT or screen data.

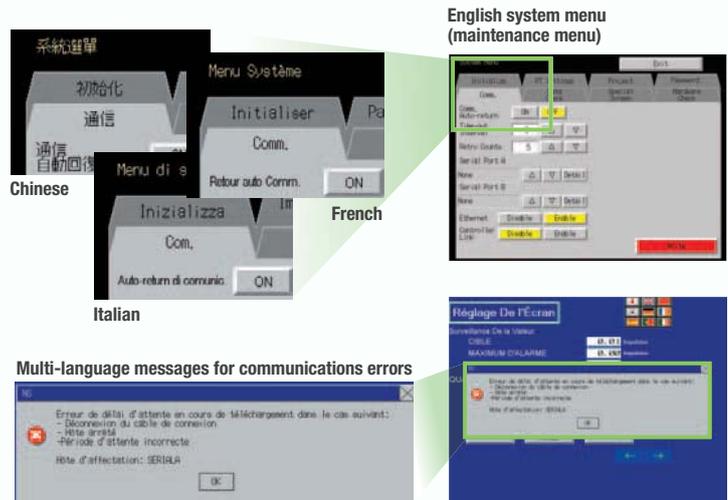


Design

Multiple functions

Execute up to 32 functions with one Multifunction Object
Multifunction Objects support Write Bit, Write Word, object control, and etc

Multifunction Objects combine the functions of multiple objects into one object. Multiple functions can be executed by pressing one button without using troublesome macros. Setup is easy. For example, a setting can be made on-screen using the Support Software to turn ON a bit to start a machine, set a value, and then change the screen.

Easy On-screen Setup with Support Software!

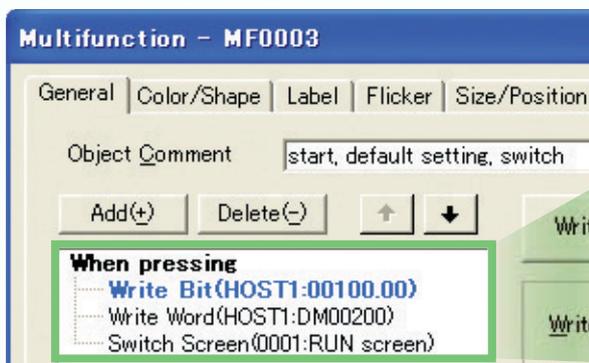


Multifunction execution with one object



Integration




Execute multiple functions with one button.

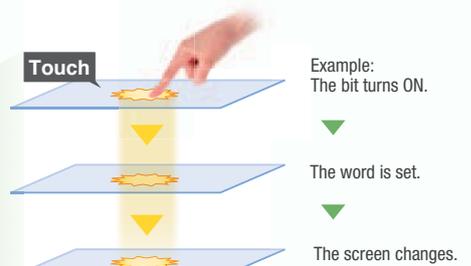

Multifunction Objects support four useful functions

Switches that do not immediately operate when touched can be easily made without ladder programming.

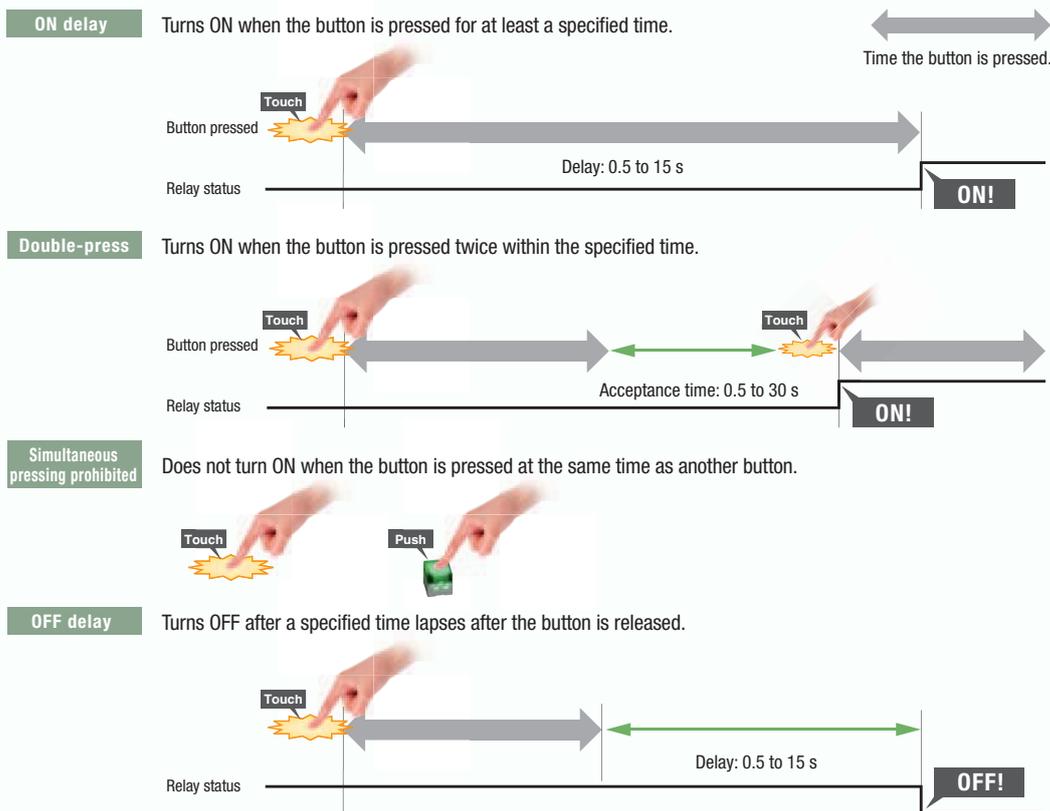


Plentiful Graphing Functions


Data Log Graph (Trend Graph)

Up to 128 data can be collected in the cycle of 500ms. Logging data is stored as a CSV file in the Memory Card inserted in the NS-series PT.

Logging data is stored as a CSV file in the Memory Card mounted in the NS-series PT. The data stored in the Memory Card can be read or deleted from the screen.

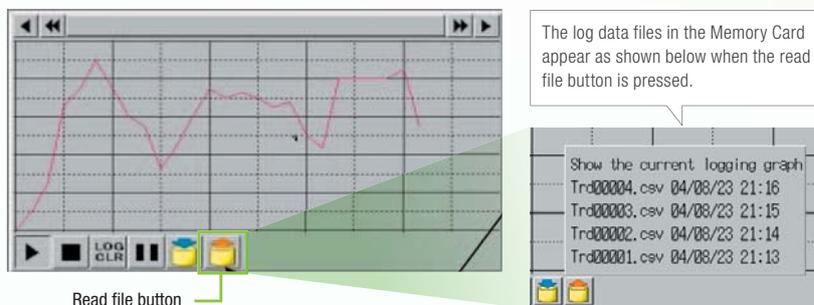


A log can be saved automatically, without any programming, just by selecting the Save the data periodically Option in the Data Log Setting Window.

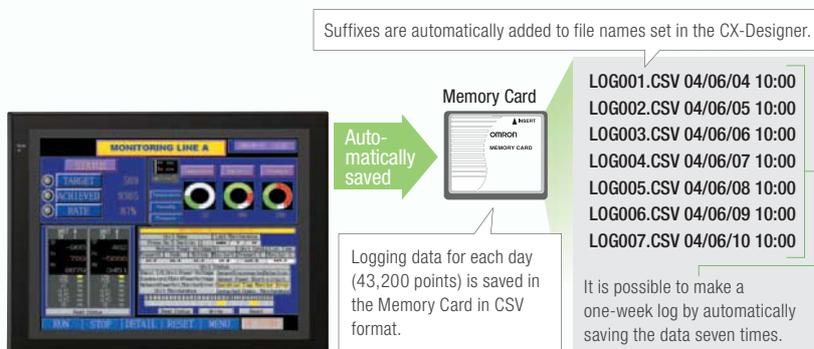


Line Graph Function

The data logged by the PLC can be displayed in overlapping graphs, so a device's operation can be compared for evaluation and analysis. In addition, up to 1,000 words of consecutive data can be displayed as a line graph, data can be displayed together, and any region can be magnified.

(1) Graphs can be superimposed.

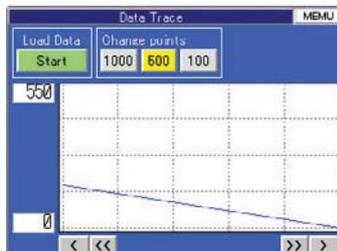


(2) The display can be magnified.

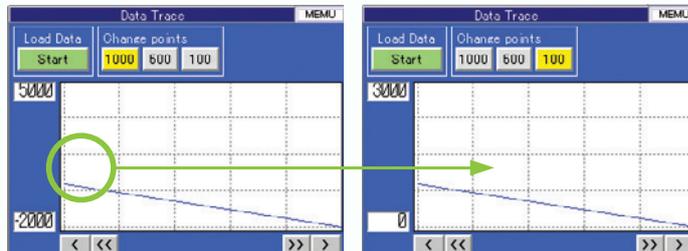

Continuous Line Function

Any position from the host (PLC) can be plotted as a graph. A graph can be plotted in any position by specifying the X and Y coordinates of the vertices. Also, the graph can be moved on the screen by specifying the movements from the PLC.

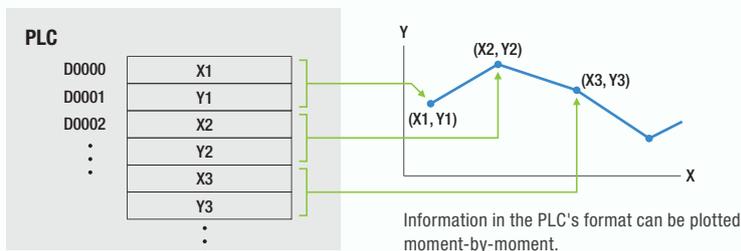

Design

Screen Data Security Functions


Protect important screen data with a password.

If password protection is set in the data transfer security settings when the screen data is designed, a password must be entered to download or upload the screen data, so important screen data can be protected.



If a password has been set, the password is required to transfer screen data (download or upload) with the Memory Card.

Security password

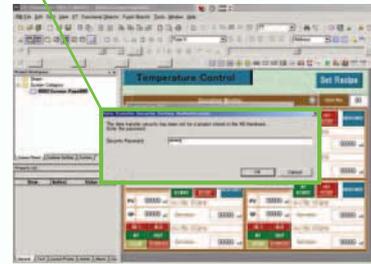

A password between 4 and 64 characters long can be set. The download/upload will start if the user inputs the password that was set when the screen was designed. (Password input will be disabled if the wrong password is input 3 times in a row.)




Device Data Transfer

Easy Data Exchange between the PLC and Components

For example, temperature controller alarm values can be transferred to the DM Area of the PLC's CPU Unit. No communications programming or macros are required.

Multi-vendor Support

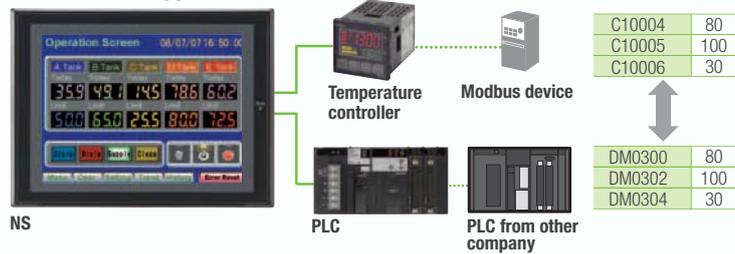


Multi-vendor Support

Devices from multiple vendors are supported. Data can be easily exchanged with PLCs from other companies and Modbus devices.


Easy Settings

To make the settings, simply specify the device and addresses of the transfer source and transfer destination in the CX-Designer. Settings can be made using the same procedure as for setting the addresses for normal components.

Easy Settings

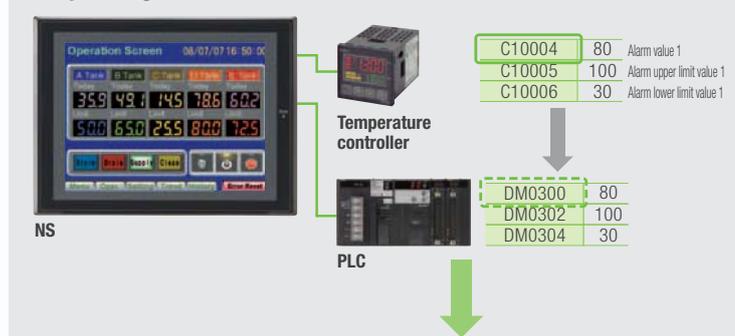

CX-Designer Select Device Data Transfer Setting from the PT Menu.

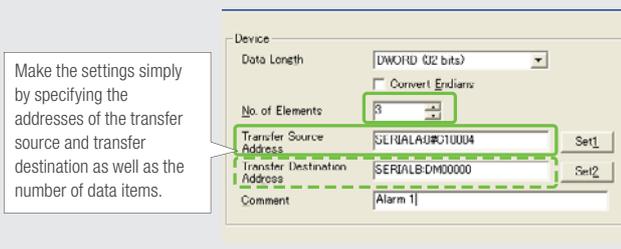

Note 1: EtherNet/IP tags are not supported.

Note 2: CX-Designer version 3.1 or higher is required.


NS system version 8.2 or higher is required.



Beauty Screens and Objects


“Cool” Screen Templates

Professionally designed screen templates are provided. There are seven different types of attractive screen templates for different themes. Simply select the best template from the library.

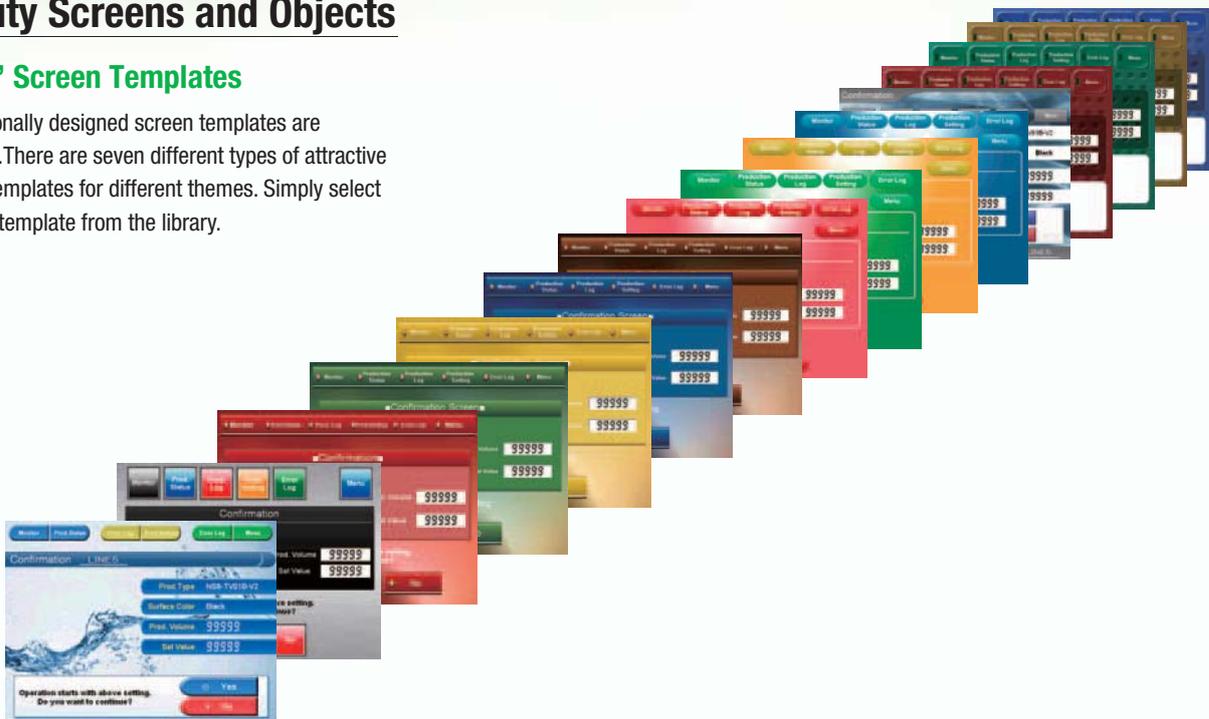

“Cool” Objects

Backgrounds, buttons, labels, message boxes, and other objects are also provided for various themes.

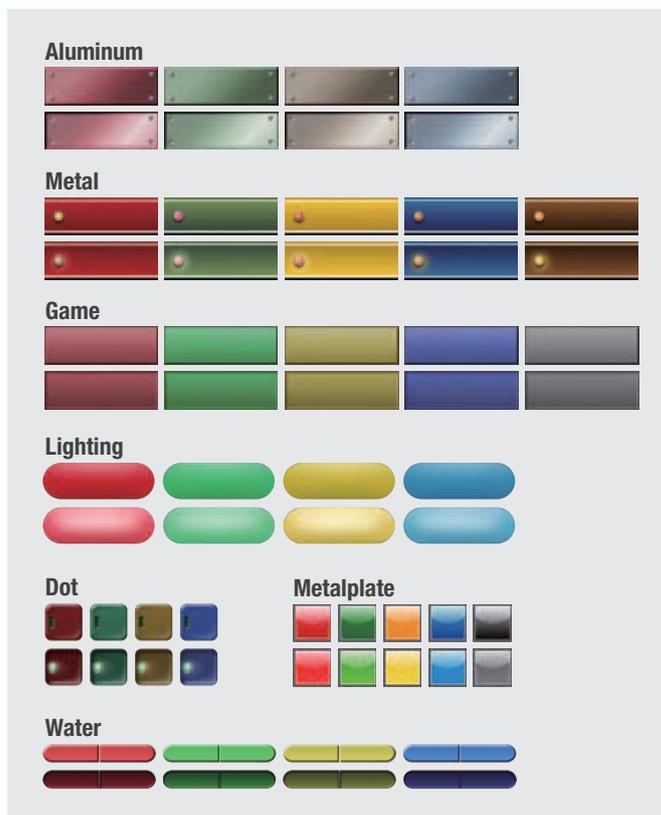

Screen Designer for NS Series, CX-Designer

User-friendly Screen Creation

Without screen creation and ladder programming, the CX-Designer Screen Design Software is so easy-to-use that anyone can master it. Quickly create the required screen by dragging and dropping objects. OMRON's unified development environment lets you drastically reduce the work required to create screens.


Note: The same type of Project Workspace and Output Window as in the CX-Programmer are provided for the user interface.

All addresses and comments can be managed using a single Symbol Table.

Shows a list of addresses, names, and comments in project screen data. Addresses, names, and I/O comments for the CX-Programmer can also be imported.

| Host | Name | Type | Address | Type/Number | I/O Comment | Tag |
|---------|----------|---------|-----------|-------------|--------------|------------------|
| All | STOP | BOOL | All | All | STOP SWITCH | Network Variable |
| H0T3 | STOP | BOOL | | | RUN SWITCH | Network Variable |
| H0T3 | RUN | BOOL | 00000 | | | None |
| H0T3 | AutoGen0 | CHANNEL | 00000 | | | None |
| H0T3 | AutoGen1 | CHANNEL | 00001 | | | None |
| SERIALA | RIGHT | BOOL | 00001.00 | | RIGHT SWITCH | None |
| SERIALA | AUTO | BOOL | W00000.00 | | AUTO SWITCH | None |
| SERIALA | PARK | BOOL | 00000.00 | | PARKING | None |
| PTMEM | AutoGen0 | CHANNEL | \$W0 | | | None |
| PTMEM | AutoGen1 | CHANNEL | \$D0 | | | None |

Improved Icons and Help

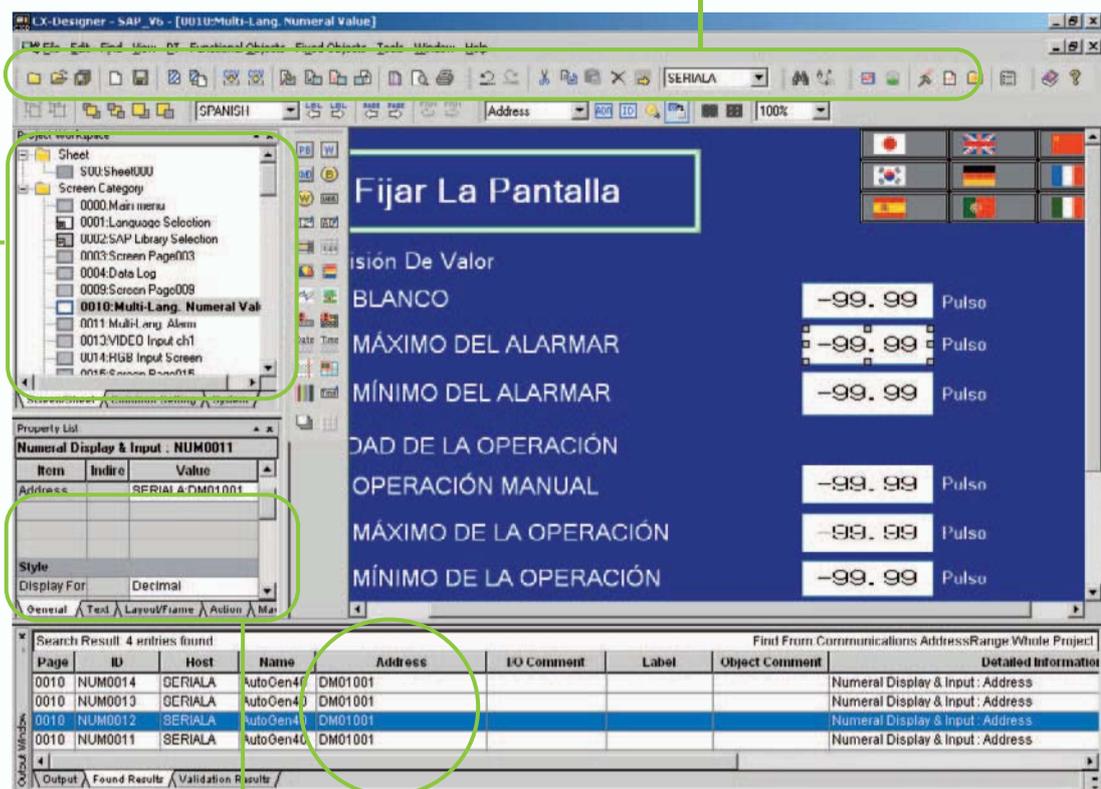

The project Workspace enables the user to look through the entire project.

- Screens you want to edit can be opened right away.
- Perform screen management, such as copying or deleting screens, by simply right-clicking.
- Reusing screens from other projects is easy with the CX-Designer.
- Settings for alarms, data logs, communications, and other functions can be easily accessed.

Drastically reduce the number of clicks in the project.

Just click on the object once to display or change properties. Multiple objects can be selected to display and change shared properties all at once.

The Output Window shows search results.


In addition to addresses and I/O comments used in screen data, labels can also be used as search strings and the results can be displayed.



Reading the Symbol Table

The symbol table created in the CX-Programmer during ladder programming can be read into the CX-Designer by dragging and dropping, so it isn't necessary to manually data such as input addresses and I/O comments. Tags (i.e., network symbols) can also be read into the CX-Designer.

Note: Version 8.0 or higher of the CX-Programmer support tags (i.e., network symbols).

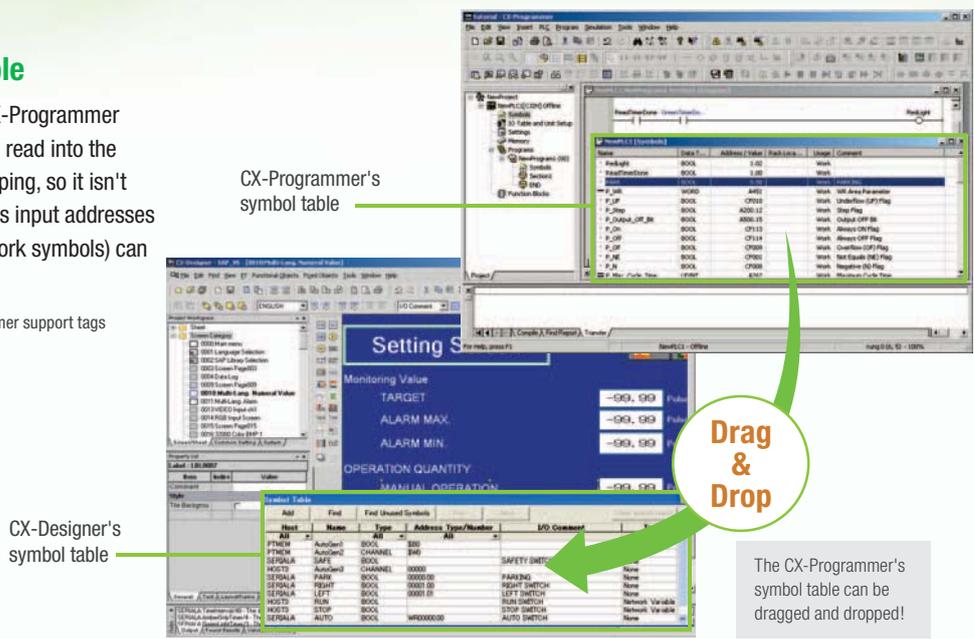

CX-Programmer's symbol table

CX-Designer's symbol table

Drag & Drop

The CX-Programmer's symbol table can be dragged and dropped!

Example of Reading the Symbol Table

The symbol table read from the CX-Programmer can be directly dragged and dropped to the touch switch and lamp.

(1) Create a switch on the screen.




(3) Allocations for buttons and lamps can also be checked on the screen using comments imported from the CX-Programmer.



Example of Easy Address Allocation


(2) Check the comment then drag-and-drop the symbol from the symbol table to the property list.

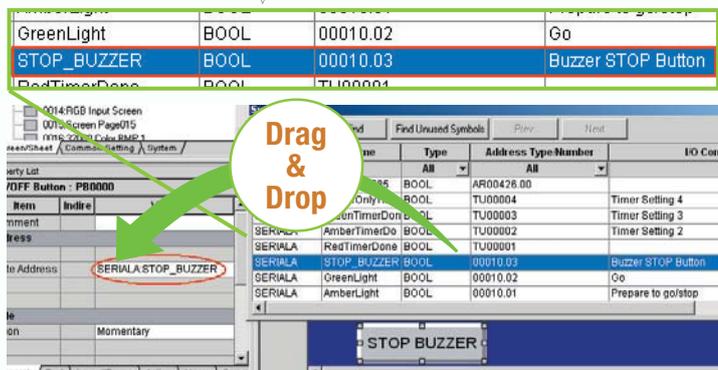

Drag & Drop

Example of Reading I/O Comments

If Use I/O comment is selected in advance for the Use symbol text as label, the I/O comments are automatically used as labels when addresses are dragged and dropped from the symbol table. (If Use symbol names is selected, the symbol names are used as the labels.)

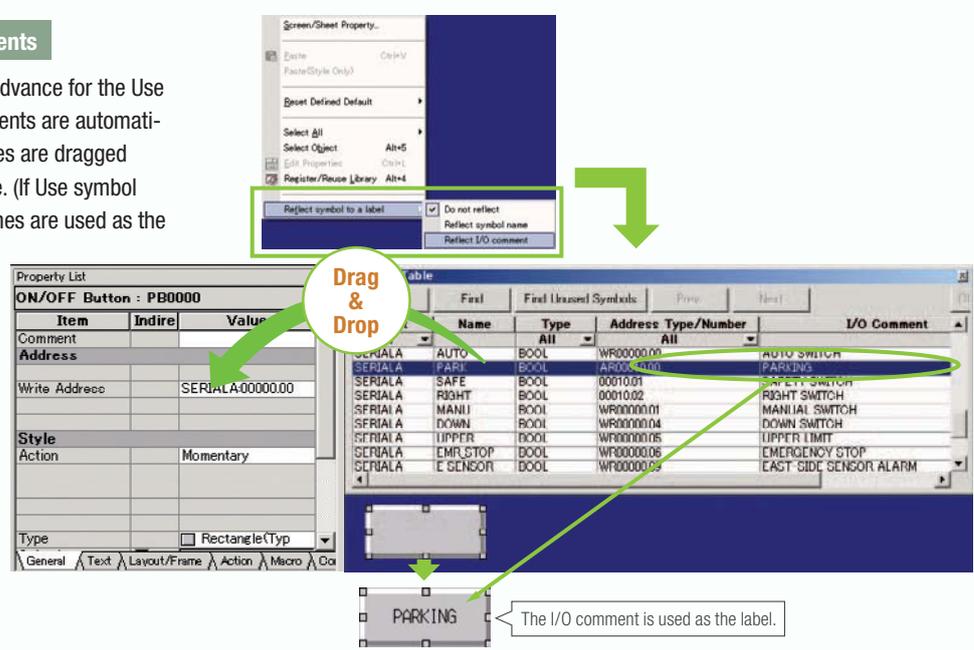

Drag & Drop


The I/O comment is used as the label.

Design


Reading Another Project's Screens and Objects

Resources from another project can be easily reused by just selecting the screen or objects that you want to read and dragging and dropping it, so screens can be created intuitively.

Example screen 1 Select the screen that you want to read, drag it to the destination, and drop it.

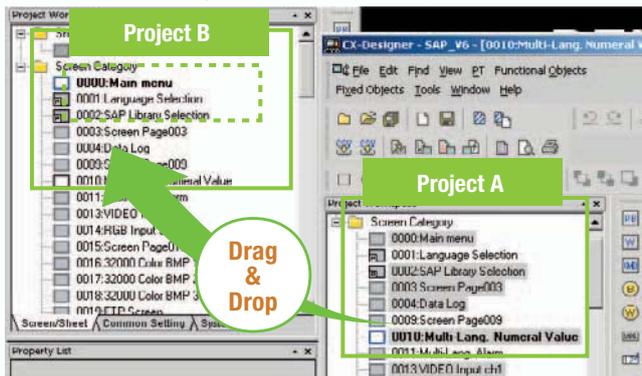


Example screen 2 Select the part that you want to read, drag it to the destination, and drop it.

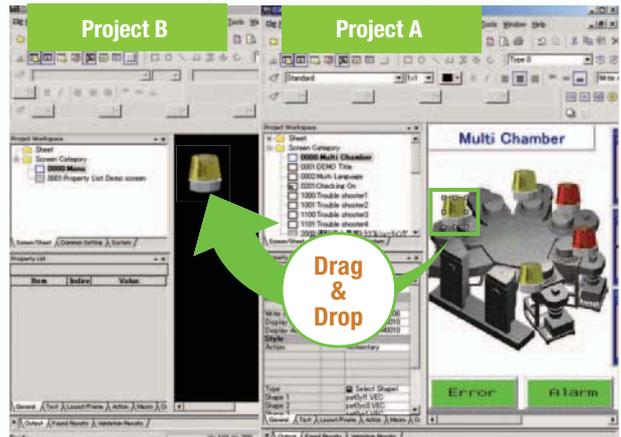


Reading CAD Files

It is possible to import DXF files by dragging and dropping them. The files are read as a diagram, and so less capacity is used than with images. It is also easy to customize the diagram by changing the shape or color.

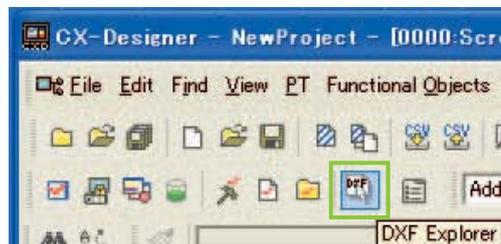

The screen data and ladder program can be checked simultaneously in the computer.


The CX-Designer and CX-Programmer interconnects the test functions in the computer through the CX-Simulator. The screens and ladder program checks are performed simultaneously, which significantly increases debugging efficiency. The CX-Programmer also has a new button for integrated simulation. And, work efficiency is further improved with the ability to keep required work screens pinned on front and to zoom in or out as desired.

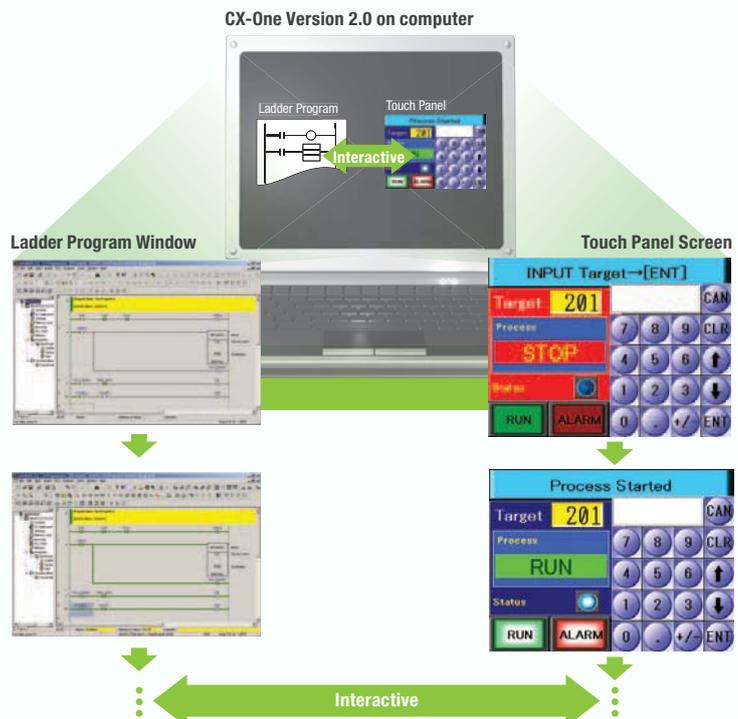


Editing of Multiple Objects

Addresses and other settings, such as labels and colors, can be set together in a list, making editing operations much more efficient. When the common attributes (such as background color and text color) of multiple parts are being changed, the attributes can be changed together using the property list.

Example screen 1 After editing the settings in the list, press the OK Button to make the new settings effective immediately.

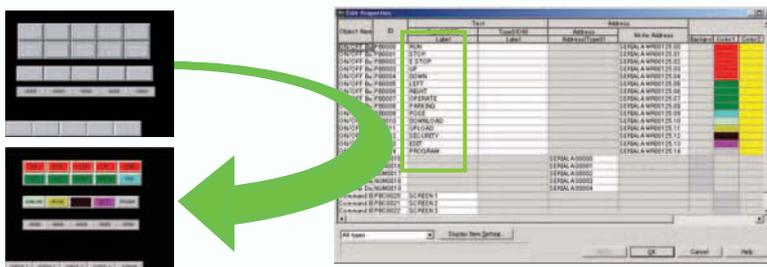

Example screen 2 If the background color is changed from white to gray in the property list, the background color is changed for all of the selected objects.

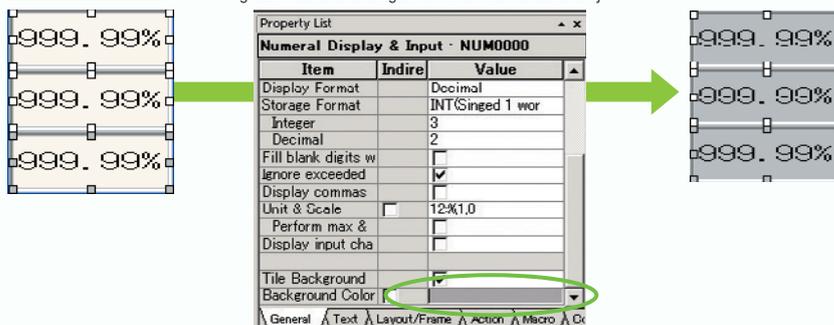

Editing of Overlapping Objects

The Select Object command is a powerful tool when you want to edit object hidden by overlapping. A filter function can also be used to aid editing by displaying only the objects to be edited.

Object Selection Window


Right-click and select Select Part to display the objects (all types) on the screen.



| Select Object | | | | |
|---------------|----------------|-----------------|-----|-------------|
| All types | | Range Selection | | Release All |
| O | Object Comment | ID | X | Y |
| (B) | | PL0000 | 96 | 136 |
| (B) | | PL0001 | 200 | 136 |
| (B) | | PL0002 | 304 | 136 |
| (B) | | PL0003 | 408 | 136 |
| (B) | | PL0004 | 96 | 184 |
| (B) | | PL0005 | 200 | 184 |
| (B) | | PL0006 | 304 | 184 |
| (B) | | PL0007 | 408 | 184 |
| (B) | | PL0008 | 96 | 232 |
| (B) | | PL0009 | 200 | 232 |
| (B) | | PL0010 | 304 | 232 |
| (B) | | PL0011 | 408 | 232 |
| (B) | | PL0012 | 96 | 280 |
| (B) | | PL0013 | 200 | 280 |
| (B) | | PL0014 | 304 | 280 |
| (B) | | PL0015 | 408 | 280 |
| (B) | | LBL0016 | 72 | 168 |
| (B) | | LBL0017 | 96 | 80 |

Filter Function

Use the Select Part command's filter function to select the objects (ON/OFF Button) that you want to edit.

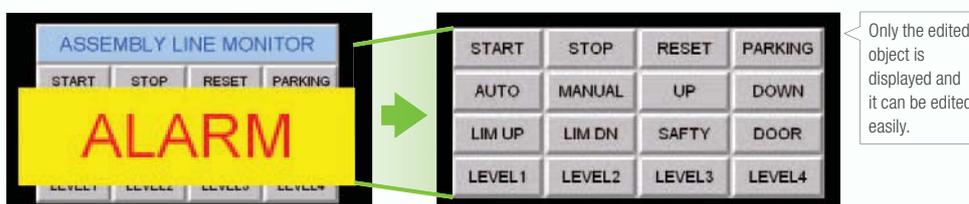

Only the edited object is displayed and it can be edited easily.

Startup/Operation

260,000-color Video Display

Equipment and workpiece movements can also be displayed in beautiful video


NS-CA001 Video Input Unit

Four video inputs or CCD cameras can be connected and up to four images can be displayed simultaneously if the image size is 320x240 pixels. The NS-CA001 cannot be used with the NS5 or the NS15.

NS-CA002 RGB/Video Input Unit

There is an analog RGB input terminal in addition to the two video input terminals. Either of the video signals or the analog RGB signal can be displayed on the NS-series PT. The NS-CA002 cannot be used with the NS5.

Note: Video input cannot be used with the NS15.
Only RGB input can be used.

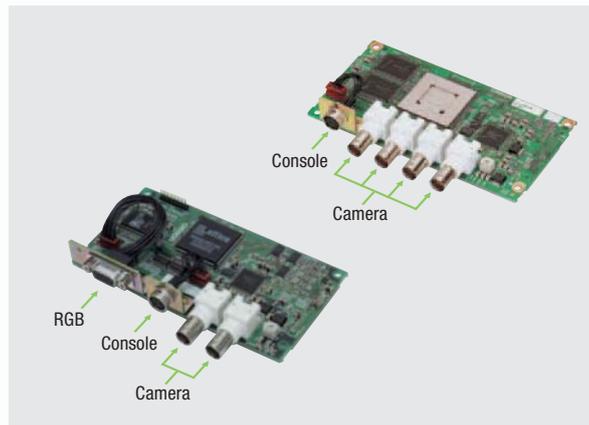

Also Compatible with OMRON Vision Sensors.



Analog RGB Output

The NS screen is seen by another monitor.

The NS15 screen (XGA) can be displayed on an on-site display that has RGB inputs.

Note: Only NS15






FTP Function

You can partially replace text and pictures from your computer.

FTP (File Transfer Protocol) has been added! Texts, lists, and recipes can be replaced with the put/get command from your computer! You can even replace BMP files from your computer easily.

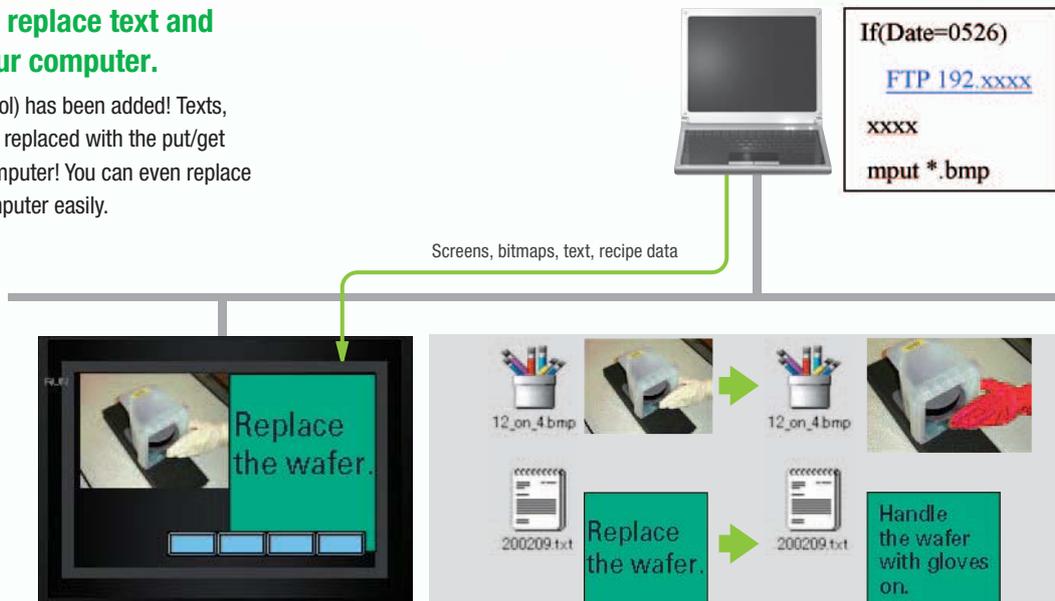

User Security Functions

Operator access rights and the operating format can be set to one of five password levels.

Each operator can be given one of 5 password levels using the User Security (level authentication) function. A password level can be set for each object, so various objects can be made inoperable or hidden based on the operator's access level.

Operator passwords are managed in 5 levels. Passwords can be up to 16 characters long and the access rights increase as the level number increases.

| Level | Operator Role | Access Level |
|--------|---------------|--------------|
| Level1 | Line Operator | Low |
| Level2 | Group Leader | Level 2 |
| Level3 | Line Manager | Level 3 |
| Level4 | Maintenance | Level 4 |
| Level5 | Administrator | High |

The operator cannot manipulate objects with a password level (authentication level) higher than the operator's login level.




Maintenance

Single Port Multi Access (SPMA)


Transfer ladder program data to the PLC via the PT. Perform online editing via the PT.

[Computer (Serial/USB) → NS-series PT (Ethernet) → PLC (Ethernet or Controller Link) → PLC]

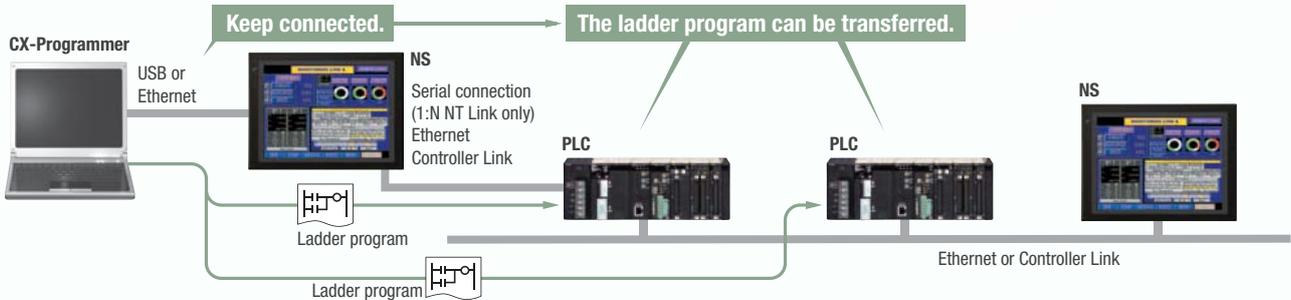

Transfer screen data via the PLC.

[Computer (Serial) → PLC (Ethernet or Controller Link) → NS-series PT]

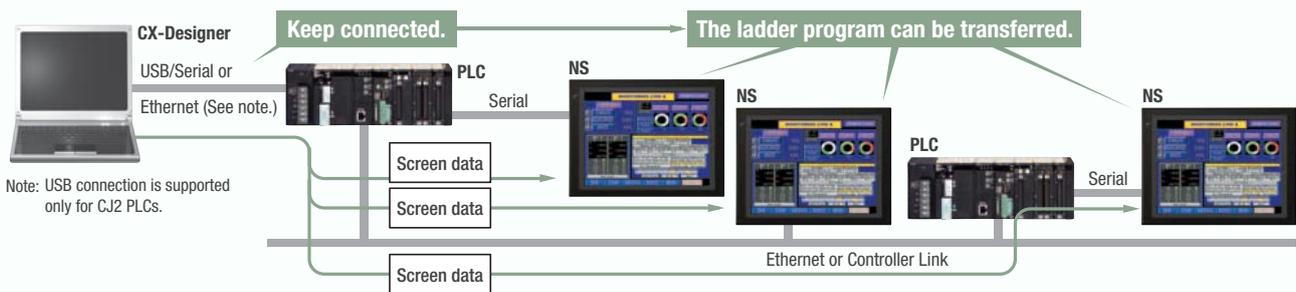


Note: USB connection is supported only for CJ2 PLCs.

Note: SPMA can be used in CS/CJ-series PLCs with lot number 030201 or later.

Note: SPMA via a PLC is not supported when a CP-series PLC is connected. (SPMA via an NS-series PT is supported with a CP-series PLC.)

Using a USB relay cable greatly improves debugging at equipment startup.

Use a USB relay cable to enable performing maintenance from in front of the control panel.

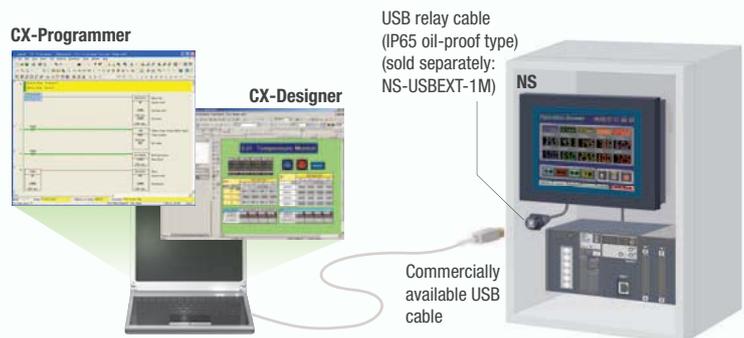

Easy Automatic Connection

A search is automatically made for the PLCs connected to the PT and the results are displayed using the automatic online connection function in the CX-Programmer. Just select a PLC from the list to connect. This function is also supported for PLCs over network layers.

PLCs registered to the PT are automatically searched for. Make the connection simply by selecting from the PLC list.




Note 1: SPMA can be used in CS/CJ-series PLCs with lot number 030201 or later.

Note 2: SPMA via a PLC is not supported when a CP-series PLC is connected. (SPMA via an NS-series PT is supported with a CP-series PLC.)

Note 3: CX-Programmer version 8.2 and higher support automatic online connection via the PT. NS system version 8.2 or higher is required.



Automatic search

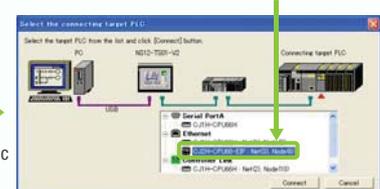




PLC Data Trace

The PLC data trace function can be used without a computer.

The PLC Data Trace function is built into the PT in addition to the Ladder Monitor and Device Monitor. A bit's status and operation can be viewed in a time chart just by setting the desired PLC bit's address in the PT. It is also now possible to display word data, save data in CSV files, and save time chart screens in BMP files.

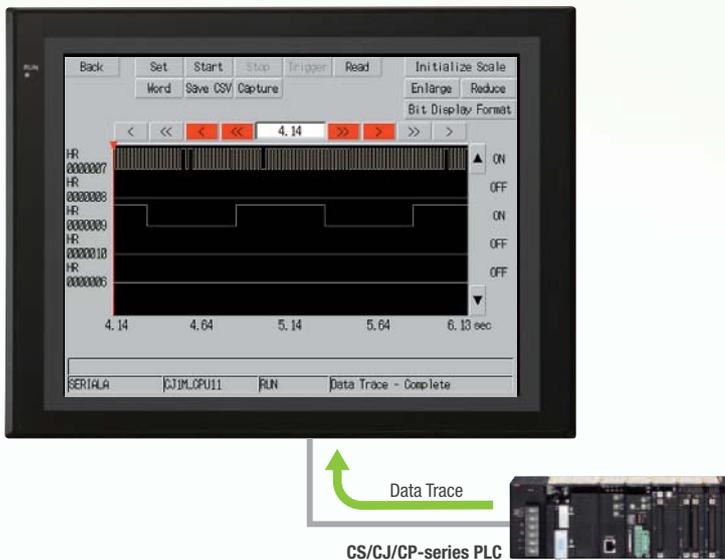

Note 1: There are differences between this Data Trace function and the CX-Programmer's Data Trace function. Refer to the NS-series Programmable Terminal Programming Manual (Cat. No. V073) for details.

Note 2: The PLC data trace function cannot be used with the 5.7-inch model.

Note 3: The PLC data trace function is not supported for connection with a CP1E PLC.

Operating log

What Was Touched When? can be recorded.

Functionality has been improved with the addition of a log to record operators' use of the panels. It is now possible to record and display the time, date, and operation details for buttons (i.e., hardware switches) pressed on the control panel in addition to operations on the touch panel. The operation log can be saved in a CSV file on a Memory Card mounted in the NS-series PT.

Switch directly from the user screen to the log operation display screen.

A comment of up to 32 characters can be set and displayed for each operation to provide easy-to-understand information about what type of operation was performed.

Multiple operation log files can be saved on a Memory Card with date and time data.

Memory Card

- Operat_080520_173000.csv
- Operat_080521_173000.csv
- Operat_080522_173000.csv

The files can be opened in Excel.

| | A | B | C | D | E | F |
|---|------------------|---|-------------|---------|---------|-------|
| 1 | Date&Time | O | Message | Page ID | NewPage | Event |
| 2 | Date&Time | P | Message | OldPage | | |
| 3 | Date&Time | M | Message | Page ID | Address | Event |
| 4 | Date&Time | A | Message | Host | Address | Event |
| 5 | 2008/7/7 15:49 M | | | PO | ID0 | Ev25 |
| 6 | 2008/7/7 15:49 O | | Stop button | PO | ID0 | Ev20 |
| 7 | 2008/7/7 15:49 M | | | PO | ID0 | Ev25 |
| 8 | 2008/7/7 15:49 O | | Stop button | PO | ID0 | Ev21 |



For example, with a control panel comprised of the NS-series PT, hardware switches, and an emergency stop button, you can even record and display operation of the emergency stop button.

Maintenance

Ladder Monitor

The ladder program can be monitored without a computer.

Ladder programs with I/O comments can be monitored on the PT's screen and the ladder program can also be edited with the Programming Console function.

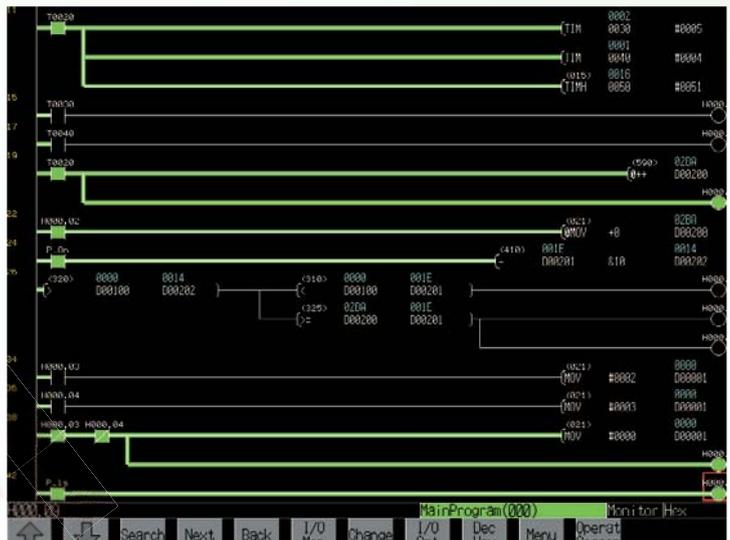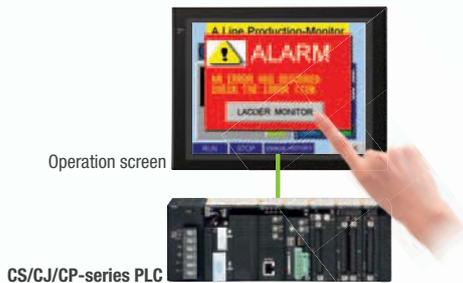

Also meets the requirements of users who need to display devices onsite

Switch Box Function

The operator can check the PLC status by displaying just the I/O comments and status.

Device Monitor Function

Displays the device's contents, allowing settings to be input and checked and making startup operations more efficient.

Switch Box Function


| Registration No. | Character | Error | Switch | Unit |
|------------------|-----------------------|-----------------------|-----------------------|-----------------------|
| 1 | Emergency Stop | Emergency Stop | Emergency Stop | Emergency Stop |
| 2 | Robot Error | Robot Error | Robot Error | Robot Error |
| 3 | Front-Panel Manual | Front-Panel Manual | Front-Panel Manual | Front-Panel Manual |
| 4 | Temperature Decreased | Temperature Decreased | Temperature Decreased | Temperature Decreased |
| 5 | Pressure Decreased | Pressure Decreased | Pressure Decreased | Pressure Decreased |
| 6 | Low Voltage | Low Voltage | Low Voltage | Low Voltage |
| 7 | Water Level | Water Level | Water Level | Water Level |
| 8 | Stop Motor Error | Stop Motor Error | Stop Motor Error | Stop Motor Error |
| 9 | Temperature Error | Temperature Error | Temperature Error | Temperature Error |
| 10 | Water Level Error | Water Level Error | Water Level Error | Water Level Error |
| 11 | Stop Overhaul Limit | Stop Overhaul Limit | Stop Overhaul Limit | Stop Overhaul Limit |
| 12 | Stop Replace Sensor | Stop Replace Sensor | Stop Replace Sensor | Stop Replace Sensor |
| 13 | Stop Line Sensor | Stop Line Sensor | Stop Line Sensor | Stop Line Sensor |
| 14 | Ladder Error | Ladder Error | Ladder Error | Ladder Error |

Device Monitor Function

| Registration No. | Character | Error | Switch | Unit |
|------------------|-----------------------|-----------------------|-----------------------|-----------------------|
| 1 | Emergency Stop | Emergency Stop | Emergency Stop | Emergency Stop |
| 2 | Robot Error | Robot Error | Robot Error | Robot Error |
| 3 | Front-Panel Manual | Front-Panel Manual | Front-Panel Manual | Front-Panel Manual |
| 4 | Temperature Decreased | Temperature Decreased | Temperature Decreased | Temperature Decreased |
| 5 | Pressure Decreased | Pressure Decreased | Pressure Decreased | Pressure Decreased |
| 6 | Low Voltage | Low Voltage | Low Voltage | Low Voltage |
| 7 | Water Level | Water Level | Water Level | Water Level |
| 8 | Stop Motor Error | Stop Motor Error | Stop Motor Error | Stop Motor Error |
| 9 | Temperature Error | Temperature Error | Temperature Error | Temperature Error |
| 10 | Water Level Error | Water Level Error | Water Level Error | Water Level Error |
| 11 | Stop Overhaul Limit | Stop Overhaul Limit | Stop Overhaul Limit | Stop Overhaul Limit |
| 12 | Stop Replace Sensor | Stop Replace Sensor | Stop Replace Sensor | Stop Replace Sensor |
| 13 | Stop Line Sensor | Stop Line Sensor | Stop Line Sensor | Stop Line Sensor |
| 14 | Ladder Error | Ladder Error | Ladder Error | Ladder Error |


so no extra work to show I/O comments

Read I/O comments directly from the PLC. I/O comments do not have to be stored in a Memory Card.

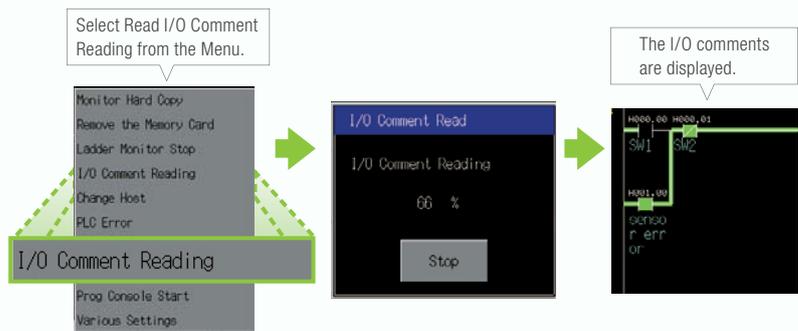

Easy checking the alarm bit and shortens searching time.

When an alarm occurs, touch the message to automatically search for the alarm bit (output bit) for the alarm. This enables you to quickly check the alarm address and investigate why the bit turned ON.

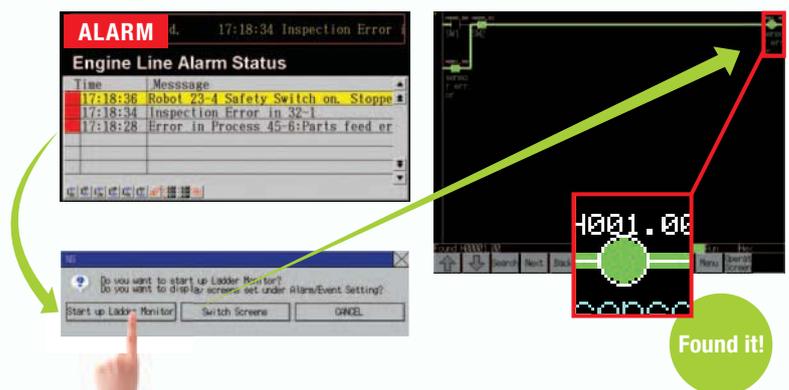



“Find Back”, “Find Next”, useful Function Supported by the NS-series.

Reduced Time to Investigate Which Output or Input Is Causing the Problem.

| Function | Operation with NS-series PT. | CX-Programmer |
|---|------------------------------|---------------|
| Find the address at specified by the cursor. | Next | “N” Key |
| Find the output from the input bit or find the input bit from the output at the cursor. | Double-click | “Space” Key |
| Return to the previous search position. | Back | “B” Key |

2. Is this input the cause? What output corresponds to this input?

4. Which of these two inputs is the cause? Let's look at CIO 21.00 first.

6. So is it input CIO 21.01 after all?

Yes, the problem is here!

1. Why is this output not turning ON?

3. Why is this output not turning ON?

5. There's no problem with input CIO 21.00. Let's go back to the previous program section.

Back

Force-setting and force-resetting are possible

Locations that have been force-set are displayed in pink and can be checked at a glance.

1. Select the input bit for which the output will be forced ON.

2. Select the address by touching the panel.

3. Select the Forced Set Option and then press the Update Button.

4. Forced ON

Minor changes in values of timers or counters can be made without Support Software.

Check and Change I/O While You View the Ladder Diagram on the I/O Monitor

Display and change the present value by specifying the address. It is also possible to force-set/reset bits with the I/O monitor.

Make the selection with the I/O monitor by touching the screen.

Changing the present value of the address selected with the Change Value Button

Note: The Ladder Monitor function is not supported by the 5.7-inch models.


NS-Runtime

NS-NSRCL (NS-Runtime)

Achieve machine/line monitoring and data logging on your office computer.


Machine Viewer

Machine monitoring in an office environment. There is no need to create complex host applications. Moreover, when an alarm occurs, a PDF file can be displayed as maintenance information. NS Series screens can be reused on the computer, and screens can be also newly created independently of touch panels at the production site.

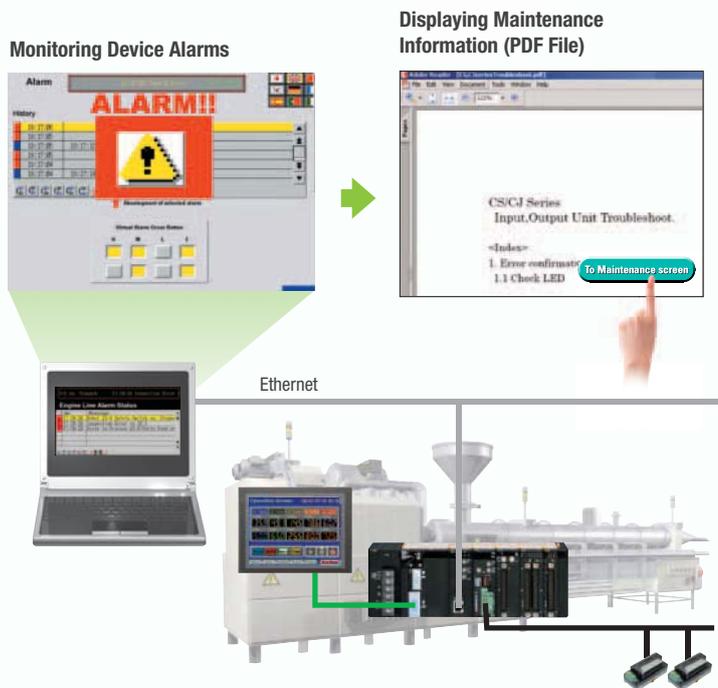

Wide Screen

Computer output can be displayed on another wide-screen monitor. XGA (1,024 x 768 dots) and up to a maximum screen size of 3,840 x 2,400 is supported. Alarms occurring in devices or the line can be monitored.

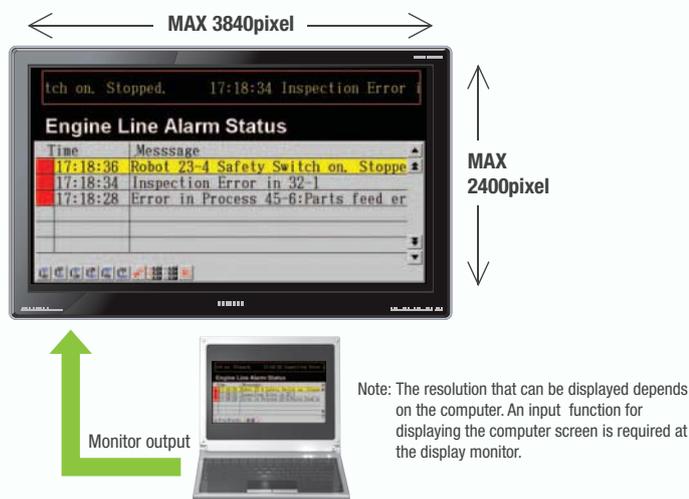

Data Logger

Log large amounts of data using a personal computer. Data can be logged through background processing, with up to 160,000 points stored in one file. The logged data is stored in CSV format, and data can be displayed on data log graphs.




Example: 160,000 Points

Data can be logged for approximately 7.4 days, assuming data is logged every two seconds for 12 hours a day. By using automatic file saving, data logging can be continued even longer than 7.4 days.

Recipe Handling


Checking machine data or switching processes from a host computer is easy. Parameter groups in the PLC can be transferred together to a computer, and the transferred data can be checked and edited in CSV format, e.g., using Excel. The edited data can then be transferred together back to the PLC.

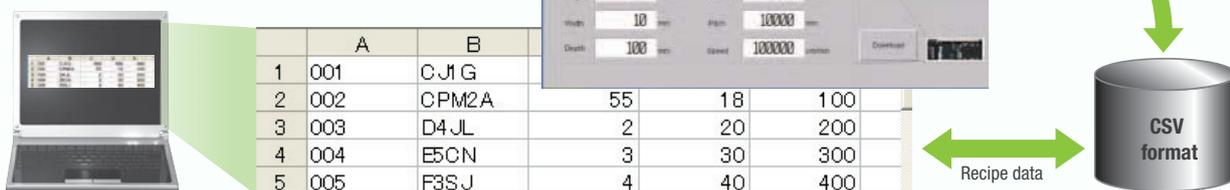

Easy Installation


To get started, just install the NS-Runtime in the computer and place the screen data in the applicable folder. NS/NSJ-series screens and NS-Runtime screens can all be managed using one single tool.

Note: The NS-Runtime will operate in a computer environment even if the CX-Designer installed is not installed. The hardware key (USB dongle) that is supplied with the NS-Runtime is required for operation.

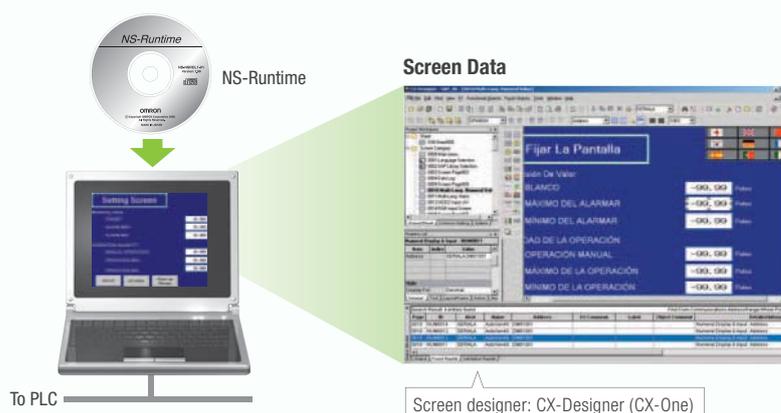

Application Startup Function

User applications can be started from NS-Runtime. Applications can be started simply by pressing buttons on the screen.

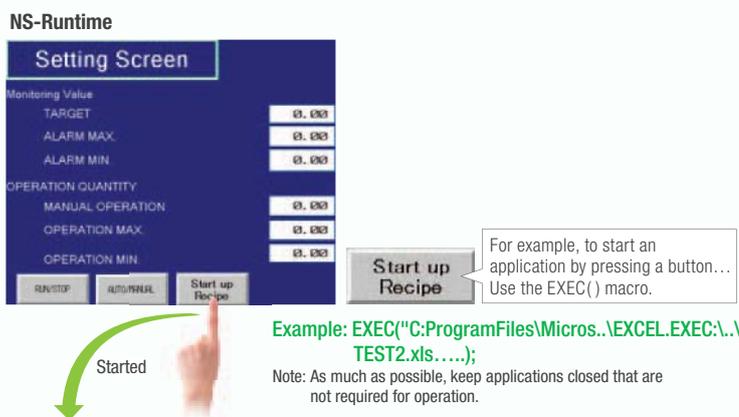

User application

| | A | B | C | D |
|---|----------------------------------|-----------|----------|-------|
| 1 | Selling Item | Parameter | Pressure | Oil W |
| 2 | Common parameter | 1 | 600 | 600 |
| 3 | Production unit | 2 | 700 | 700 |
| 4 | Frequency of occurrence of alarm | 3 | 800 | 800 |
| 5 | | 4 | 900 | 900 |
| 6 | Read from PLC | | | |
| 7 | Write to PLC | | | |

Note 1: If the screen data is converted for the NS Series, NS-Series PT system versions must be 8.1 or earlier. The screen data of system version 8.2 can not be converted for the NS-Runtime.
 Note 2: Do not use this product for 24-hour operation in an FA environment. OMRON shall not be responsible if the computer or application does not operate properly due to noise or other causes. OMRON shall not be responsible for any problems that may be caused by any applications other than OMRON products.

Hand-held PT

NSH5 Series

A hand-held version of the NS5 is now available to perform operations at the production site. The NS-series PT's have a complete set of functions that can be used at the production site, such as the SAP Library, multi-language support, and Programming Console functions.

Function Switches
Use the ten functions switches.
F1, F2, F6, F7: Wired outputs
F3 to F5, F8 to F10: Communications outputs

Memory Card Interface and USB Slave Connector.
Easily transfer screens or save logs at high speed using a USB connection.

Emergency Stop Switch.
3PST-NC Structure
DPST-NC: Increase safety (wired outputs).
SPST-NC: Input to internal NSH5 memory, output to a lamp for emergency stop switch operation, or output via communications, e.g., to a PLC.

Water Resistance to IP65
The water-resistant structure is equivalent to IP65 on all surfaces. The PT may not be suitable for use in environments with long-term water exposure.

PT and Cable Sold Separately
Select the Cable according to the application (RS-232C/RS-422A).
Connector-loose wires, UL connector, 3 m or 10 m.

3-Position Enable Switch
Increased safety with DPST-NO structure (wired outputs).

Precautions for Emergency Stop Switches

When using a hand-held NSH5 that will be installed and removed from a control panel or Removable Box, always use the specified Stop Switch (Gray/NSH5-SQG10B-V2) to conform to Safety Standards (EN 60204-1).

Options

Removable Box

A separate external circuit is not required because the Removable Box has been configured so that the emergency stop switch line will not turn OFF (i.e., so that the emergency stop circuit will operate) even when the NSH5 is removed.

Visor

Use when the NSH5 is in direct sunlight.

Mounting Bracket

Use to attach the NSH5 to a control panel.



Programmable Terminals NS Series

Even Simpler Equipment Operation with Outstanding Synergy.



Features

- 5.7 to 12.1 inch sizes are available.
- A hand-held version of the NS5 is now available to perform operations at the production site. The NS-series PT's have a complete set of functions that can be used at the production site.
- The Smart Active Parts(SAP Library) makes it easy to connect to OMRON PLCs and components, OMRON provides a development environment that requires with no programming and no screen designing.
- When an error occurs in a Unit in the OMRON PLCs, the Troubleshooter SAP Library provides an easy-to-understand explanation of the cause of the error as well as the countermeasures.
- Ladder Monitor come as a Standard Feature. The ladder program can be monitored onsite without a laptop! Ladder monitor lets you monitor PLC program status, search for addresses or instructions, monitor multiple I/O points, and much more.
- Provides the FA integrated tool package "CX-One" for a Screen Design Software Integrated Simulation come as a Standard Feature. The integrated simulation function simulates ladder programs and screen data simultaneously even without the actual hardware.
- Screens support 42 languages and the Support Software supports eight. System messages can be displayed in eight languages.
- Single Port Multi Access (SPMA) come as a Standard Feature. The ladder program and screen data can be transferred from a single port!
- Connectable PLCs and devices appear one after another.
Has become connectable with the PLCs of Mitsubishi Electric Corporation and the Inverters of OMRON Corporation.


Sysmac is a trademark or registered trademark of OMRON Corporation in Japan and other countries for OMRON factory automation products. Windows is registered trademarks of Microsoft Corporation in the USA and other countries. EtherCAT is a registered trademark of Beckhoff Automation GmbH for their patented technology. Other company names and product names in this document are the trademarks or registered trademarks of their respective companies.

NS Series

Network

Provides serial NT Link communications supporting both 1:1 and 1:N connections. The NT Link has more efficient communications than Host Link and its capabilities are especially apparent in applications with multiple PTs connect to the PLC. The NS-series PTs can also support communications with multiple PLCs and multiple NS-series PTs through Controller Link and Ethernet connections, so the network can be configured freely to match the requirements and scale of the application. In addition, using the NS-Runtime makes it possible to monitor machine status and log data from the host.


[Example NS-series Network Configuration]

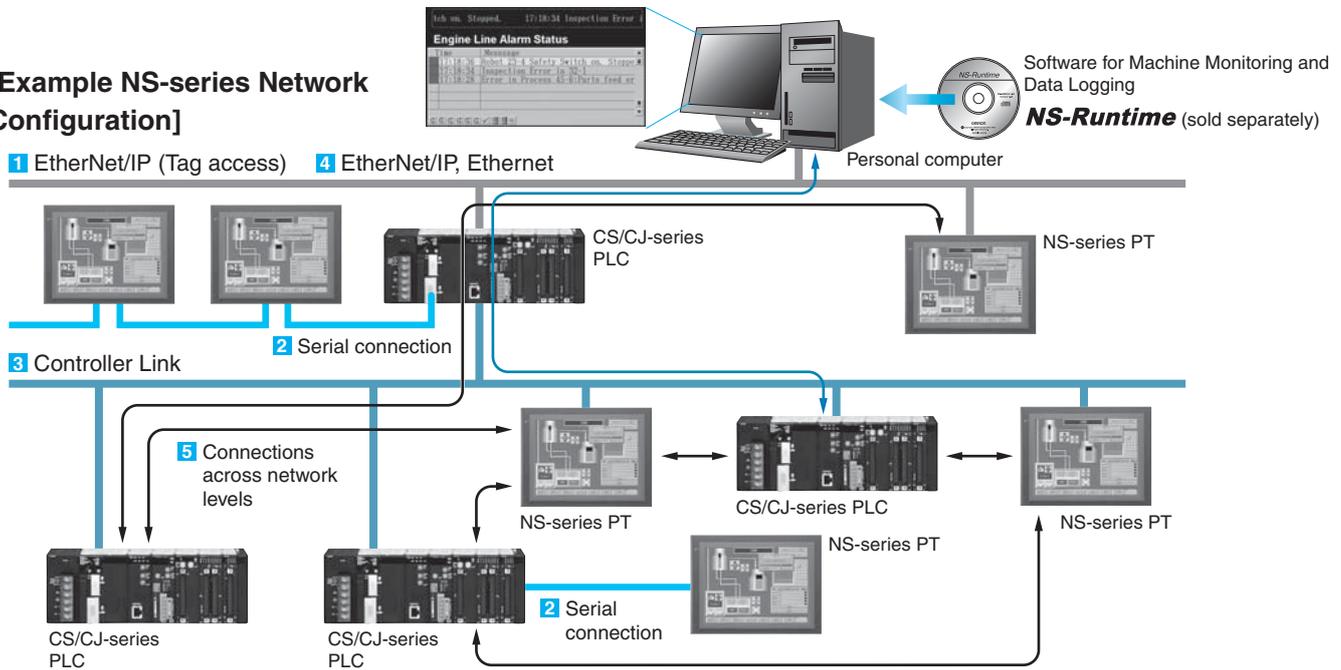

Configuration of CJ2 series and NJ series

1 EtherNet/IP Connection (Tag accesses)

If an Ethernet-compatible NS-series PT is used, the PT can connect to a Controller with built-in EtherNet/IP and an Option Unit is not needed to connect at the PT.

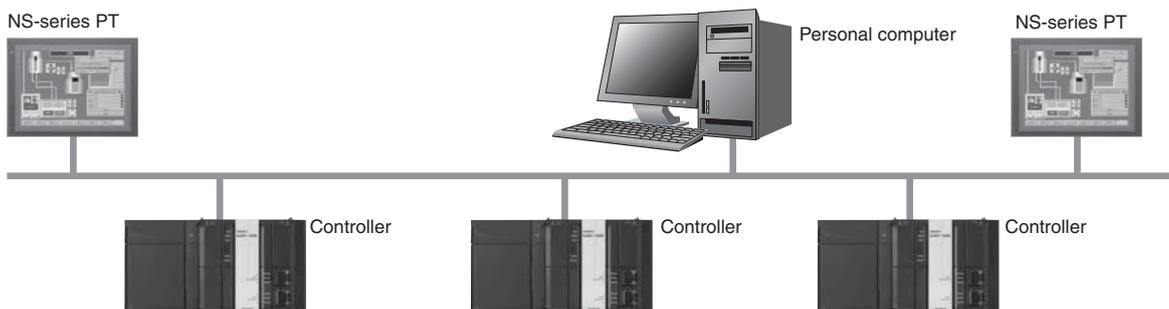

Configuration of CS series, CJ series and CP series

2 Serial connection


1:1 NT Link or Host Link

●NS:PLC = 1:1

Connecting with the PLC through port A or port B




●NS:PLC = 1:2

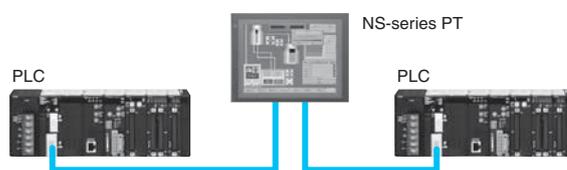


1:N NT Link

●NS:PLC ratio = 8:1 max. Up to 8 NS-series PTs can be connected to each of the PLC's RS-232C/RS-422A ports.

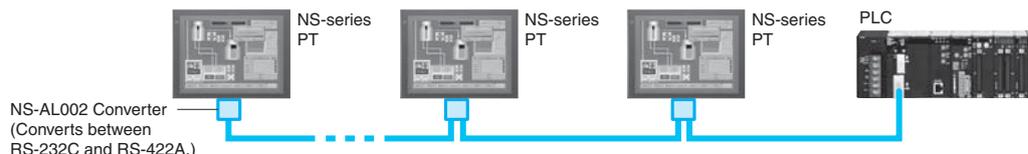

3 Controller Link Connection

The PT can be connected to an OMRON Controller Link network by mounting a Controller Link Interface Unit.

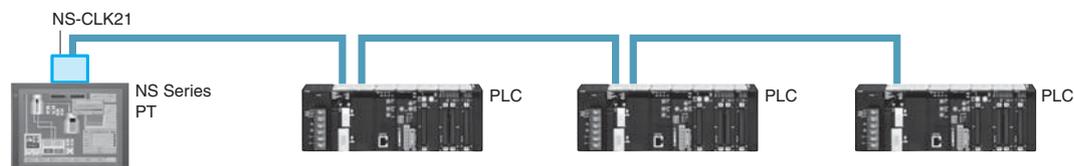


If a Controller Link connection is used, data links can be set between PLCs and multiple PLCs can be monitored/set from the NS-series PT's screen.

- Baud rate
2 Mbps (500 m max.)
1 Mbps (800 m max.)
500 kbps (1 km max.)
- Max. number of nodes: 32 nodes


4 Ethernet Connection

If an Ethernet-compatible NS-series PT is used, the PT can connect to a PLC with an Ethernet Unit and an Option Unit is not needed to connect at the PT.

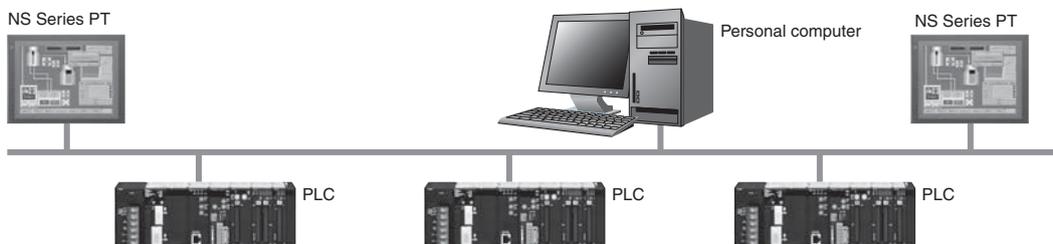


5 Connections Over Network Levels

The NS-series PTs can connect to a variety of devices in the network, through as many as 3 network levels. For example, if SAP (Smart Active Parts) are being used, an NS-series PT connected by Ethernet can be used to monitor the information in a PLC connected through Controller Link as well as the information in the DeviceNet Slaves connected to that PLC.

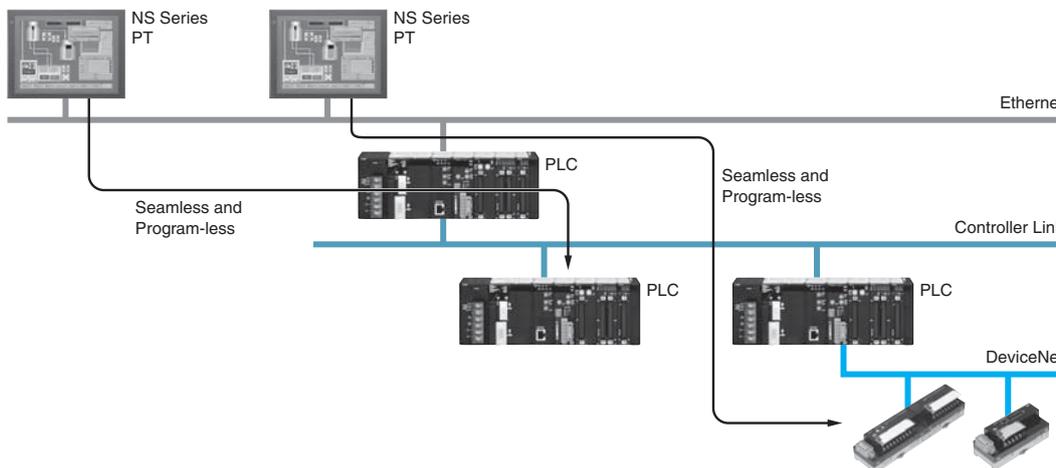


System Configuration

NS5/NS8/NS10/NS12/NS15

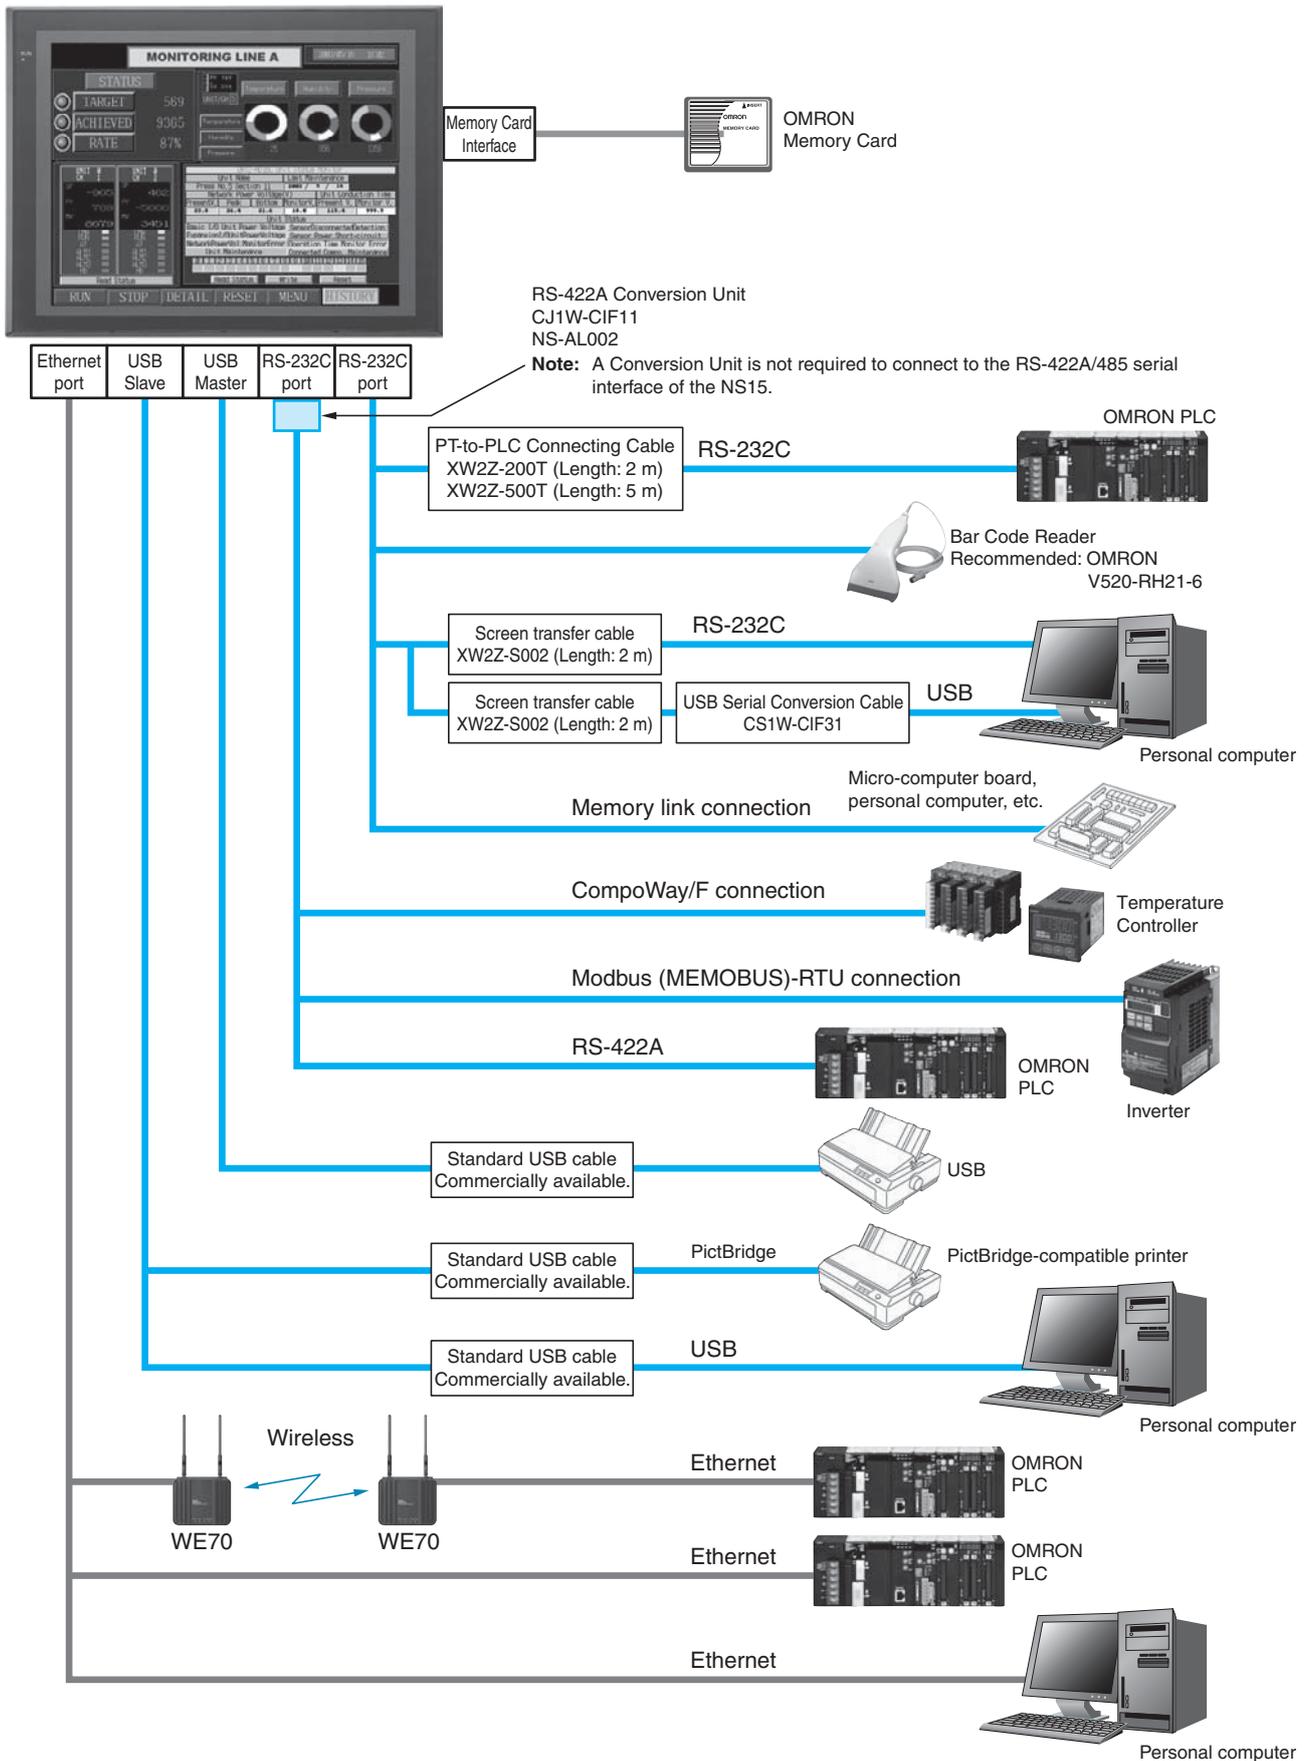


Expansion Bus Interface

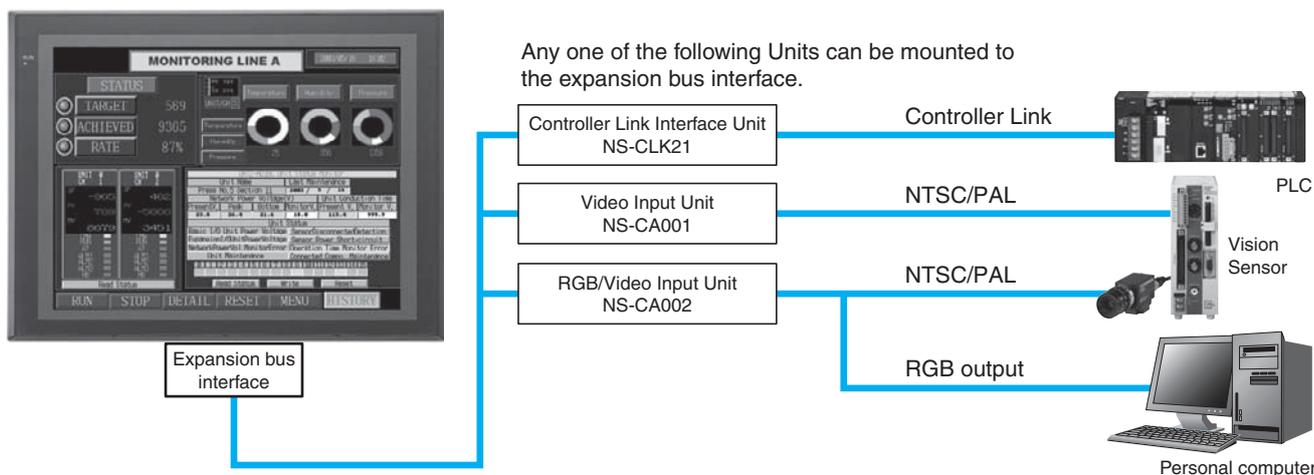



Note: Video Input Units and RGB Video Input Units cannot be used with some models.

Multi-vendor

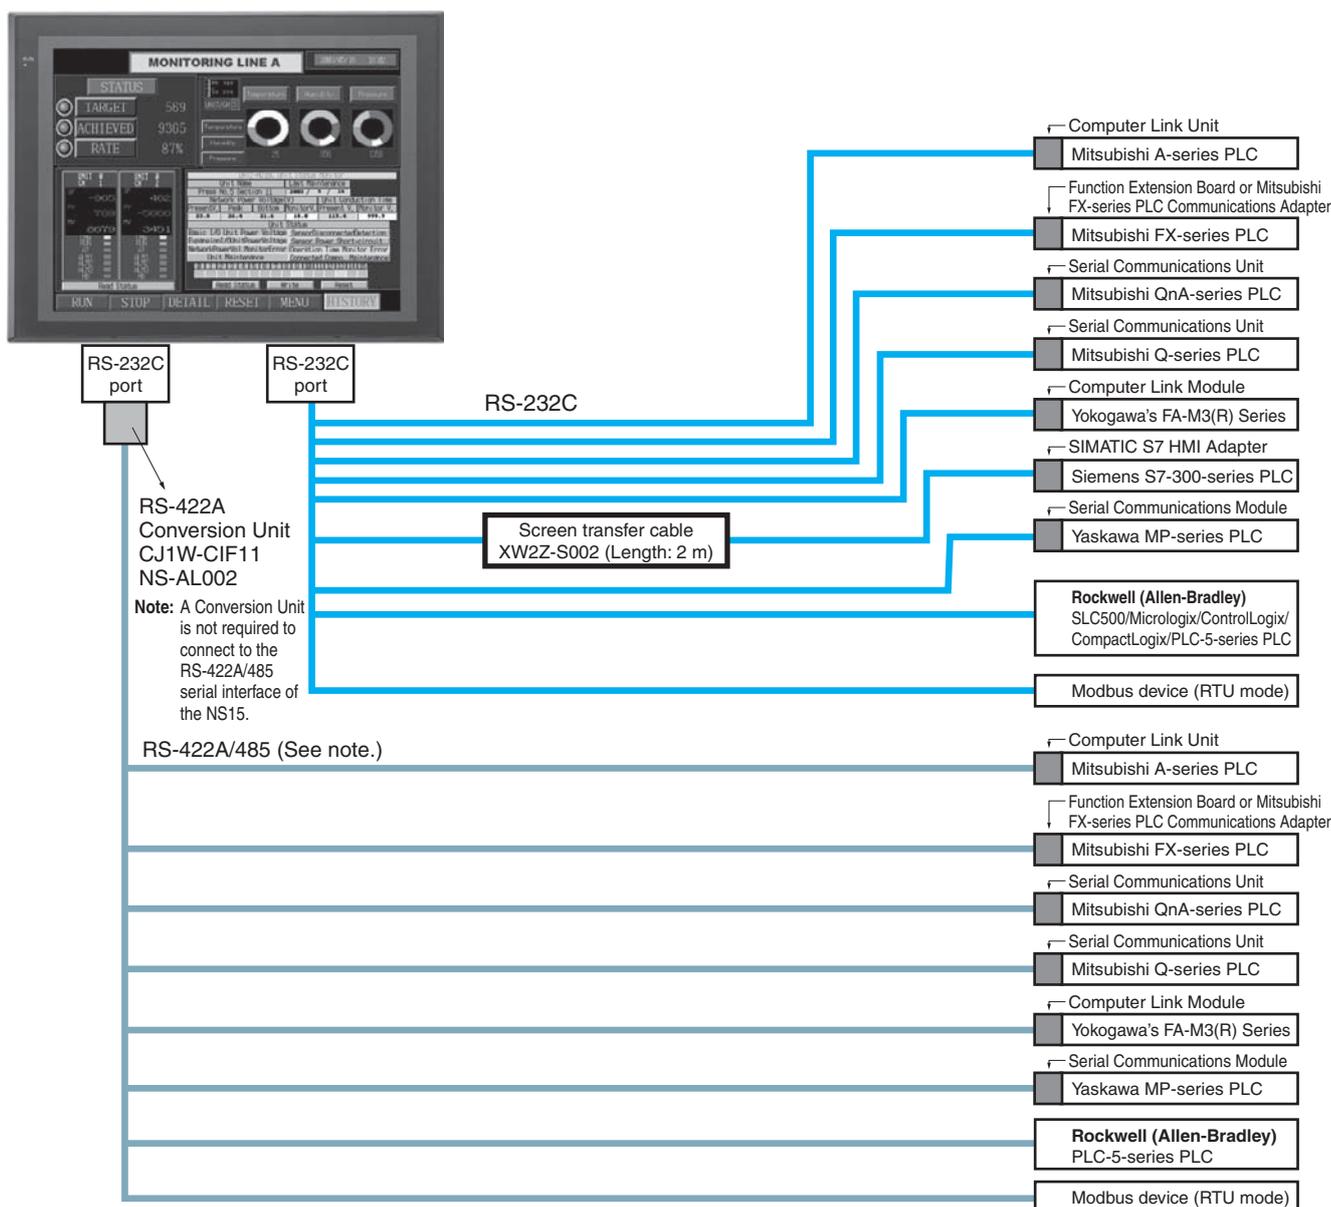


Note: Whether an RS-422A or RS-485 connection is supported depends on the device that you are connecting to. For details, refer to the Connectable Devices page or NS-Series Programmable Terminals HOST CONNECTION MANUAL Multivendor Connection (Cat.V092).

NSH5 Hand-held PT

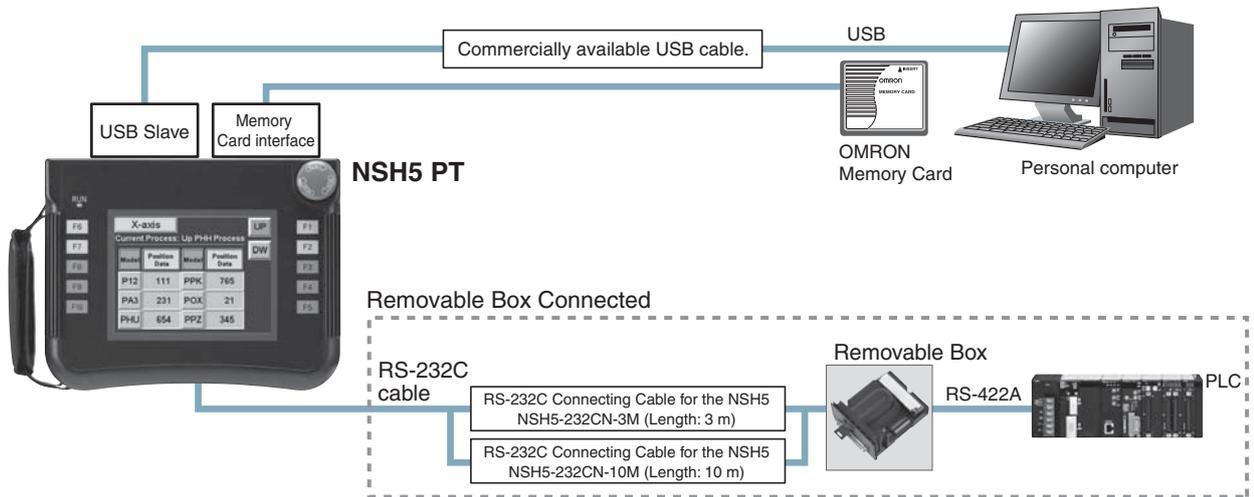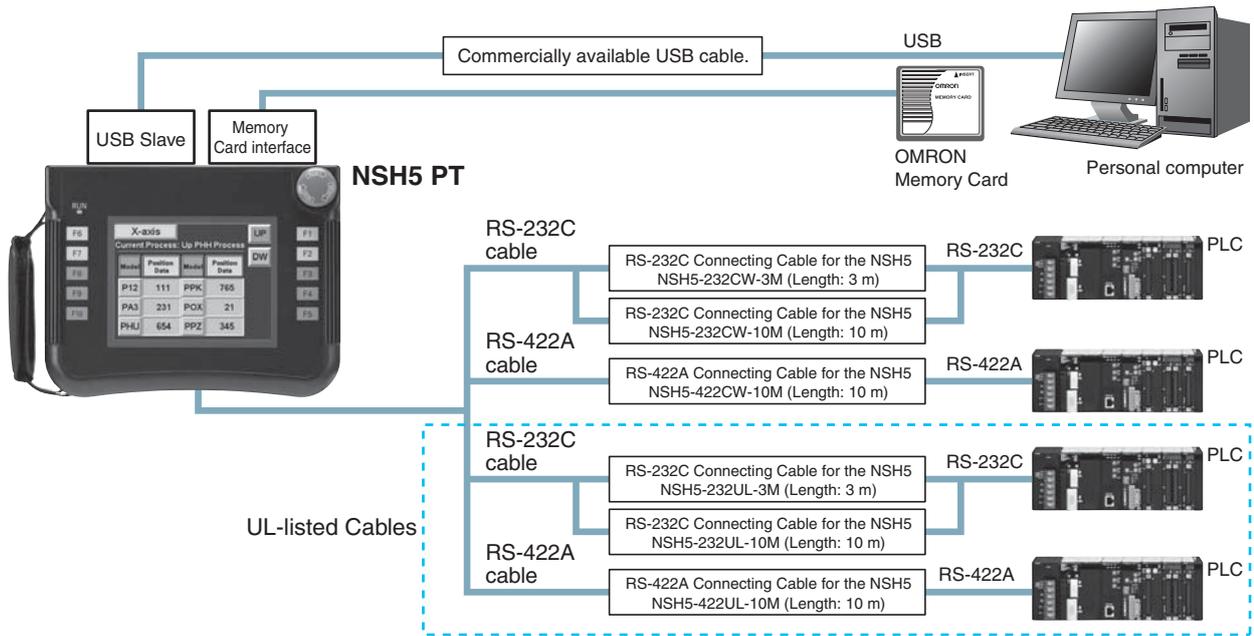

System Configuration (Removable Box Connected)

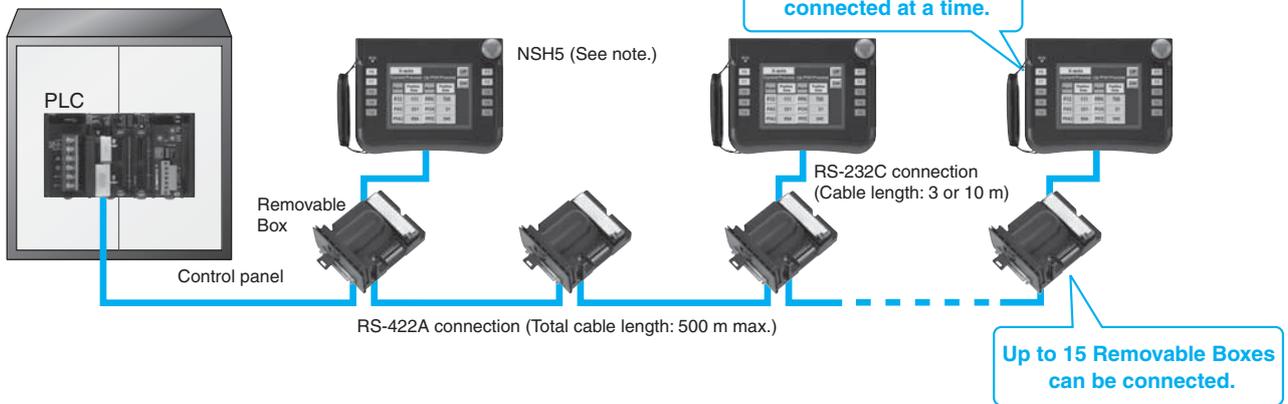

Note: Before removing the NSH5 from the Removable Box, be sure to first turn OFF the power supply key on the Removable Box.

Ordering Information

International Standards

- The standards are available as follows: U: UL, U1: UL (Class I Division 2 Products for Hazardous Locations), C: CSA, UC: cULus, UC1: cULus (Class I Division 2 Products for Hazardous Locations), CU: cUL, N: NK, L: Lloyd, and CE: EC Directives.
- Contact your OMRON representative for further details and applicable conditions for these standards.

Programmable Terminals

| Product name | Specifications | | | | Model | Standards |
|----------------------------------|---|------------------|----------|---------------------------------------|----------------|-------------------------------|
| | Effective display area | Number of dots | Ethernet | Case color | | |
| NS5-V2 (See note.) | 5.7-inch STN monochrome | 320 × 240 dots | No | Ivory | NS5-MQ10-V2 | UC1, CE, N, L, UL Type4 |
| | | | | Black | NS5-MQ10B-V2 | |
| | | | Yes | Ivory | NS5-MQ11-V2 | |
| | | | | Black | NS5-MQ11B-V2 | |
| | 5.7-inch TFT color | | No | Ivory | NS5-SQ10-V2 | |
| | | | | Black | NS5-SQ10B-V2 | |
| | | | Yes | Ivory | NS5-SQ11-V2 | |
| | | | | Black | NS5-SQ11B-V2 | |
| | 5.7-inch High-luminance TFT color | No | Ivory | NS5-TQ10-V2 | | |
| | | | Black | NS5-TQ10B-V2 | | |
| | | Yes | Ivory | NS5-TQ11-V2 | | |
| | | | Black | NS5-TQ11B-V2 | | |
| NS8-V2 | 8.4-inch TFT | 640 × 480 dots | No | Ivory | NS8-TV00-V2 | UC1, CE, N, L |
| | | | | Black | NS8-TV00B-V2 | |
| | | | Yes | Ivory | NS8-TV01-V2 | |
| | | | | Black | NS8-TV01B-V2 | |
| NS10-V2 | 10.4-inch TFT | 640 × 480 dots | No | Ivory | NS10-TV00-V2 | UC1, CE, N, L, UL Type4 |
| | | | | Black | NS10-TV00B-V2 | |
| | | | Yes | Ivory | NS10-TV01-V2 | |
| | | | | Black | NS10-TV01B-V2 | |
| NS12-V2 | 12.1-inch TFT | 800 × 600 dots | No | Ivory | NS12-TS00-V2 | UC1, CE, N, L, UL Type4 |
| | | | | Black | NS12-TS00B-V2 | |
| | | | Yes | Ivory | NS12-TS01-V2 | |
| | | | | Black | NS12-TS01B-V2 | |
| NS15-V2 | 15-inch TFT | 1,024 × 768 dots | Yes | Silver | NS15-TX01S-V2 | |
| | | | | Black | NS15-TX01B-V2 | |
| NSH5-V2 (See note.) Hand-held | 5.7-inch TFT | 320 × 240 dots | No | Black (Emergency stop button: Red) | NSH5-SQR10B-V2 | UC, CE |
| | | | | Black (Stop button: Gray) | NSH5-SQG10B-V2 | |

Note: As of July 2008, the image memory has been increased to 60 MB.

NS-Runtime

| Product name | Specifications | Media | Model | Standards | |
|--------------|--|-------------|-------|------------|---|
| NS-Runtime | NS-Runtime Installer, PDF manual, hardware key (See note.) | 1 license | CD | NS-NSRCL1 | - |
| | | 3 licenses | | NS-NSRCL3 | |
| | | 10 licenses | | NS-NSRCL10 | |

Note: A hardware key (USB dongle) is required for NS-Runtime operation.

● System Requirements

| Item | Specifications |
|-------------|---|
| OS | Windows XP (Service Pack 3 or higher), Vista, or 7 (Support 64-bit version for only Windows 7.) |
| CPU | Celeron, 1.3 GHz or higher (Recommended) |
| Memory size | HDD: 50 MB min., RAM: 512 MB min. (Windows 7: 1 GB min.). 50 MB is required for the Runtime alone. (An additional 280 MB is required if CX-Server is not already installed.) |

Software

● How to Select Required Support Software for Your Controller

The required Support Software depends on the Controller to connect. Please check the following table when purchasing the Support Software.

| Item | Omron PLC System | Omron Machine Automation Controller System |
|------------------------|-----------------------------------|--|
| Controller | CS, CJ, CP, and other series | NJ-series |
| Programmable Terminals | NS-series | NS-series with an Ethernet port |
| Software | FA Integrated Tool Package CX-One | Automation Software Sysmac Studio |

● FA Integrated Tool Package CX-One

| Product name | Specifications | | | Model | Standards |
|---|--|--------------------|-----------|----------------|-----------|
| | | Number of licenses | Media | | |
| FA Integrated Tool Package CX-One Ver.4.□ | The CX-One is a comprehensive software package that integrates Support Software for OMRON PLCs and components. CX-One runs on the following OS. Windows XP (Service Pack 3 or higher), Vista or 7 Note: Except for Windows XP 64-bit version CX-One Version 4.□ includes CX-Designer Ver.3.□. For details, refer to the CX-One catalog (Cat. No. R134) | license *1 | DVD *2 | CXONE-AL01D-V4 | — |
| | CX-Designer can still be ordered individually in the following model numbers. | | | | |
| CX-Designer Ver.3.□ | Screen Designer for NS Series Windows XP (Service Pack 3 or higher), Vista or 7 Note: Except for Windows XP 64-bit version The Ladder Monitor Software is included with CX-Designer Ver.3.□. Note: The Ladder Monitor Software is used to monitor CS/CJ-series PLC ladder programs from an NS-series PT. A Memory Card and Memory Card Adapter (both sold separately) are required to use the Ladder Monitor Software with the NS8-V1, NS10-V1, or NS12-V1, or with the NS8-V2, NS10-V2, or NS12-V2 with system program version 6.6 or lower. | 1 license | CD | NS-CXDC1-V3 | — |

*1. Multi licenses are available for the CX-One (3, 10, 30, or 50 licenses).

*2. The CX-One is also available on CD (CXONE-AL□□C-V4).

● Automation Software Sysmac Studio

Please purchase a DVD and required number of licenses the first time you purchase the Sysmac Studio. DVDs and licenses are available individually. Each model of licenses does not include any DVD.

| Product name | Specifications | | | Model | Standards |
|--|--|--------------------|-------|---------------|-----------|
| | | Number of licenses | Media | | |
| Sysmac Studio Standard Edition Ver.1.□ | The Sysmac Studio provides an integrated development environment to design, program, debug, and maintain SYSMAC NJ-series Controllers and other Machine Automation Controllers, as well as EtherCAT slaves. Sysmac Studio runs on the following OS. Windows XP (Service Pack 3 or higher, 32-bit version)/Vista (32-bit version)/7 (32-bit/64-bit version) | — (Media only) | DVD | SYSMAC-SE200D | — |
| | The Sysmac Studio Standard Edition DVD includes Support Software to set up EtherNet/IP Units, DeviceNet slaves, Serial Communications Units, and Support Software for creating screens on HMIs (CX-Designer). For details, refer to the Sysmac Integrated Catalogue (P072). | 1 license* | — | | |

Note: To connect the NJ-series Controller, NS system version 8.5 or higher is required. CX-Designer version 3.3 or higher is also required.


* Multi licenses are available for the Sysmac Studio (3, 10, 30, or 50 licenses).

Cable

| Product name | Specifications | | Model | Standards |
|--|--|---------------|-----------------------|-----------|
| Cable *1  | Screen transfer cable for DOS/V (CX-Designer ↔ PT) | Length: 2 m | XW2Z-S002 | – |
| | USB-Serial Conversion Cable | Length: 0.5 m | CS1W-CIF31 | N |
| | USB relay cable | Length: 1 m | NS-USBEXT-1M | – |
| NSH5 Cables | RS-422A cable (loose wires + D-Sub 9-pin) | Length: 10 m | NSH5-422CW-10M | – |
| | RS-232C cable (loose wires + D-Sub 9-pin) | Length: 3 m | NSH5-232CW-3M | – |
| | RS-232C cable (loose wires + D-Sub 9-pin) | Length: 10 m | NSH5-232CW-10M | – |
| UL-compliant NSH5 Cable | RS-422A cable (loose wires) | Length: 10 m | NSH5-422UL-10M | CU |
| | RS-232C cable (loose wires + relay cable) | Length: 3 m | NSH5-232UL-3M | |
| | RS-232C cable (loose wires + relay cable) | Length: 10 m | NSH5-232UL-10M | |
| PT-to-PLC Connecting Cable *2 | PT connection: 9 pins PLC connection: 9 pins | Length: 2 m | XW2Z-200T | – |
| | | Length: 5 m | XW2Z-500T | |
| | PT connection: 9 pins PLC peripheral port | Length: 2 m | XW2Z-200T-2 | |
| | | Length: 5 m | XW2Z-500T-2 | |
| NSH5 Removable Box Cable | RS-232C Cable (connectors) | Length: 3 m | NSH5-232CN-3M | |
| | | Length: 10 m | NSH5-232CN-10M | |
| NSH5 Removable Box | – | | NSH5-AL001 | |
| NSH5 Wall-mounting Bracket | – | | NSH5-ATT02 | |
| NSH5 Visor | – | | NSH5-ATT01 | |

- *1. Use a standard USB Type A male to Type B type male Cable to connect the NS series PT to a personal computer (CX-Designer).
Use a standard USB cable to connect the NS series PT to a PictBridge-compatible printer. USB cable type depends on the printer.
- *2. To connect the NS series PT to NJ series Controller, using a commercially available 10/100-BASE-TX twisted-pair cable.
For detail, refer to the NS series SETUP MANUAL (Cat. No.V083).

Options

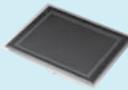
| Product name | Specifications | Model | Standards | |
|--|---|--|---------------|---|
| Video Input Unit  | Inputs: 4 channels Signal type: NTSC/PAL | NS-CA001 | UC1, CE | |
| | Input channels: 2 video channels and 1 RGB channel *1 Signal type: NTSC/PAL | NS-CA002 | | |
| Special Cable for the Console | Cable length: 2 m | F150-VKP (2 m) | - | |
| | Cable length: 5 m | F150-VKP (5 m) | | |
| Controller Link Interface Unit  | For Controller Link Communications | NS-CLK21 | UC1, CE | |
| RS-422A Adapter  | Transmission distance: 500 m total length Note: Use this model when connecting PT models without a V□ suffix. Note: PT models with the V□ suffix can also be connected. | NS-AL002 | - | |
| | Transmission distance: 50 m total length Note: Only PT models with a suffix of V□ are connectable. Use the NS-AL002 to connect models without a V□ suffix. | CJ1W-CIF11 | UC1, N, L, CE | |
| Sheet/Cover *2  | Anti-reflection Sheets (5 surface sheets) | NS15 | NS15-KBA04 | - |
| | | NS12/10 | NS12-KBA04 | |
| | | NS8 | NS7-KBA04 | |
| | Protective Covers (5 pack) (anti-reflection coating) | NS12/10 | NS12-KBA05 | |
| | | NS8 | NS7-KBA05 | |
| | | NS5 | NT31C-KBA05 | |
| | Protective Covers (1 cover included) (Transparent) | NS15 | NS15-KBA05N | |
| | | NS12/10 | NS12-KBA05N | |
| | Protective Covers (5 covers included) (Transparent) | NS8 | NS7-KBA05N | |
| | | NS5 | NT31C-KBA05N | |
| | | NS5 | NT31C-KBA05N | |
| | Attachment | NT625C/631/631C Series to NS12/10 Series | NS12-ATT01 | |
| NT625C/631/631C Series to NS12/NS10 Series (Black) | | NS12-ATT01B | | |
| NT610C Series to NS12/10 Series | | NS12-ATT02 | | |
| NT620S/620C/600S Series to NS8 Series | | NS8-ATT01 | | |
| NT600M/600G/610G/612G Series to NS8 Series | | NS8-ATT02 | | |
| Memory Card  | 128 MB | HMC-EF183 | | |
| | 256 MB | HMC-EF283 | | |
| | 512 MB | HMC-EF583 | | |
| Memory Card Adapter | --- | HMC-AP001 | CE | |
| Replacement Battery | Battery life: 5 years (at 25°C) | CJ1W-BAT01 | - | |
| Bar Code Reader | CCD handheld bar code reader (RS-232C interface) | V520-RH21-6 | - | |

*1. One screen cannot display two video inputs simultaneously.

*2. A Chemical-resistant Cover (NT30-KBA01) is available only for the NS5.


General Specifications

NS5/NS8/NS10/NS12/NS15
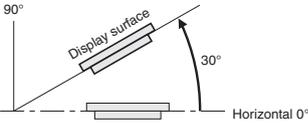
| Series | NS5-V2 | NS8-V2 | NS10-V2 | NS12-V2 | NS15-V2 |
|---|--|-------------|-------------|-------------|---|
| Rated power supply voltage | 24 VDC | | | | |
| Allowable voltage range | 20.4 to 27.6 VDC (24 VDC \pm 15%) | | | | |
| Power consumption | 15 W max. | 25 W max. | | 45 W max. | |
| Ambient operating temperature | 0 to 50 °C (See note on the next page.) Note: The ambient operating temperature is subject to the following restrictions according to the mounting angle. Mounting angle of 0 to 30° to the horizontal: • When no Expansion Units are mounted, the operating temperature range is 0 to 45°C. • When a Video Input Unit or a Controller Link Interface Unit is mounted, the ambient operating temperature is 0 to 35°C. Mounting angle of 30 to 90° to the horizontal: Operating temperature range of 0 to 50°C | | | |  |
| Storage temperature | -20 to 60 °C *1 | | | | |
| Ambient operating humidity | 35 to 85% (0 to 40 °C), 35 to 60% (40 to 50 °C) (with no condensation) | | | | |
| Operating environment | No corrosive gases. | | | | |
| Noise immunity | Conforms to IEC61000-4-4, 2 kV (power lines). | | | | |
| Vibration resistance (during operation) | 10 to 57 Hz, 0.075 mm amplitude, 57 to 150 Hz, 9.8 m/s ² 30 min each in X, Y, and Z directions | | | | 5 to 8.4 Hz, 3.5 mm single amplitude, 8.4 to 150 Hz, 9.8 m/s ² 10 min times each in X, Y, and Z directions |
| Shock resistance (during operation) | 147 m/s ² 3 times each in direction of X, Y, and Z | | | | |
| Weight | 1.0 kg max. | 2.0 kg max. | 2.3 kg max. | 2.5 kg max. | 4.2 kg max. |
| Degree of protection | Front operating panel: Equivalent to IP65 oil-proof type and NEMA4 UL type 4. *2 Note: May not be applicable in locations with long-term exposure to oil. | | | | |
| Ground | Ground to 100 Ω or less. | | | | |
| Battery life | 5 years (at 25 °C): Replace battery within 5 days after the battery runs low (indicator lights orange). | | | | |
| Applicable standards | Certified for conformance to UL 508, UL 1604, EMC Directive, NK, and LR Standards. | | | | |

*1. Operate the PT within the temperature and humidity ranges shown in the right diagram.

*2. Support for NS5, NS10, NS12 and NS15.

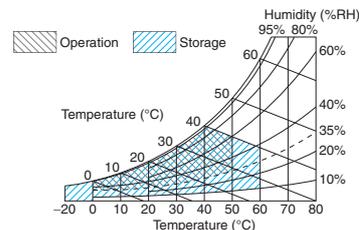

NSH5 Hand-held PT

| Series | NSH5-V2 | |
|---|--|------------------------------------|
| Type | 5.7-inch Color TFT (Hand-held Version) | |
| Case color | Black | |
| Built-in Ethernet port | No | |
| Model | NSH5-SQR10B-V2 (Emergency stop button: Red) | NSH5-SQG10B-V2 (Stop button: Gray) |
| Rated power supply voltage | 24 VDC | |
| Allowable voltage range | 20.4 to 27.6 VDC (24 VDC \pm 15%) | |
| Power consumption | 10 W max. | |
| Ambient operating temperature | 0 to 40°C | |
| Storage temperature | -20 to 60°C | |
| Ambient operating humidity | 35% to 85% (0 to 40°C) with no condensation | |
| Operating environment | No corrosive gases. | |
| Noise immunity | Common mode: 1,000 Vp-p (between power supply terminals and panel) Normal mode: 300 Vp-p Pulse width: 100 ns to 1 μ s, Rise time: 1-ns pulse | |
| Vibration resistance (during operation) | 10 to 57 Hz, 0.075 mm amplitude, 57 to 150 Hz, 9.8 m/s ² 30 min each in X, Y, and Z directions | |
| Shock resistance (during operation) | 147 m/s ² 3 times each in direction of X, Y, and Z | |
| Weight | 1 kg max. | |
| Degree of protection | Equivalent to IP65. | |
| Ground | Ground to 100 Ω or less. | |
| Battery life | 5 years (at 25°C): Replace battery within 5 days after the battery runs low (indicator lights orange). | |
| Applicable standards | Certified for conformance to UL 508, EMC Directive, and EN 60204-1. | |

Performance/Specifications

NS5

| Series | NS5-V2 | | | | | | | | | | | | |
|--|---|---|--------------|--------------|--|---|--------------|--------------|-----------------------------|-------------|--------------|--------------|--|
| | NS5-MQ10-V2 | NS5-MQ11-V2 | NS5-MQ10B-V2 | NS5-MQ11B-V2 | NS5-SQ10-V2 | NS5-SQ11-V2 | NS5-SQ10B-V2 | NS5-SQ11B-V2 | NS5-TQ10-V2 | NS5-TQ11-V2 | NS5-TQ10B-V2 | NS5-TQ11B-V2 | |
| Built-in Ethernet port | No | Yes | No | Yes | No | Yes | No | Yes | No | Yes | No | Yes | |
| Case color | Ivory | | Black | | Ivory | | Black | | Ivory | | Black | | |
| Display device | STN Monochrome LCD | | | | TFT color LCD | | | | Color High-luminance TFT *1 | | | | |
| Effective display area | Width 117.2 × height 88.4 mm (5.7 inches) | | | | | | | | | | | | |
| Display colors | 16 gradations | | | | 256 colors | | | | | | | | |
| Number of dots | 320 dot horizontal × 240 dot vertical | | | | | | | | | | | | |
| View angle | Left/right: 45°, Top: 20°, Bottom: 40° | | | | Left/right: 80°, Top: 80°, Bottom: 60° | | | | | | | | |
| Screen data capacity | 60 Mbytes | | | | | | | | | | | | |
| Image data (BMP or JPG images) | 16 gradations | | | | 32,768 colors | | | | | | | | |
| Memory Card | Supported | | | | | | | | | | | | |
| Ladder Monitor function | Not supported | | | | | | | | | | | | |
| Video Input Unit support | Not supported | | | | | | | | | | | | |
| Controller Link Interface Unit (Wired) support | Not supported | | | | | | | | | | | | |
| Backlight *2 | Service life *3 | 50,000 hours min. | | | | 75,000 hours min. | | | | | | | |
| | Brightness adjustment | There are 3 levels that can be set with the touch panel. *4 | | | | Three-level or 32-level brightness adjustment from the touch panel screen. *5 | | | | | | | |
| | Backlight error detection *6 | Error is detected automatically, and the RUN indicator flashes green as notification. | | | | | | | | | | | |
| Touch panel (matrix type) | Method | Matrix resistive membrane | | | | | | | | | | | |
| | Number of switches/resolution | 300 (20 horizontal × 15 vertical) 16 × 16 dots for each switch | | | | | | | | | | | |
| | Input | Pressure-sensitive | | | | | | | | | | | |
| | Service life | 1,000,000 touch operations. | | | | | | | | | | | |
| Display text | Labels | Can be specified in CX-Designer. Font, style, and size can be specified. | | | | | | | | | | | |
| | Numerals, alarms, and character strings | Scalable Gothic: Magnification: 6 to 255 points Rough: Magnification: 1×1, 1×2, 2×1, 2×2, 3×3, 4×4, 8×8 Standard: Magnification: 1×1, 1×2, 2×1, 2×2, 3×3, 4×4, 8×8 Fine: Magnification: 1×1, 1×2, 2×1, 2×2, 3×3, 4×4, 8×8 7-segment display: Can display only numerals, dates, and times. | | | | | | | | | | | |
| | Supported languages (42 languages) | Scalable Gothic, rough, standard, and fine can be used for 42 languages. Japanese, simplified Chinese, traditional Chinese, Korean, English, French, German, Italian, Portuguese, Spain, Swedish, Dutch, Finnish, Norwegian, Basque, Catalan, Danish, Albanian, Croatian, Czech, Hungarian, Polish, Romanian, Slovak, Slovenian, Bulgarian, Belarusian, Russian, Serbian, Macedonian, Ukrainian, Georgian, Icelandic, Afrikaans, Faroese, Indonesian, Greek, Turkish, Estonian, Latvian, Lithuanian, Thai (supported only with scalable Gothic font) | | | | | | | | | | | |
| Text attributes | Color | Monochrome, 16 gradations | | | | 256 colors | | | | | | | |
| | Font style (only when vector font is specified) | Bold or italic | | | | | | | | | | | |
| | Vertical alignment | Top, center, or bottom | | | | | | | | | | | |
| | Horizontal alignment | Left-justified, centered, or right-justified | | | | | | | | | | | |
| Flicker | Objects supporting flicker | Functional objects: Select from up to 10 types of registered flicker settings. The flicker speed and flicker range can be set. Fixed objects: Select from three flicker types. | | | | | | | | | | | |
| Numeral units and scale settings | 1,000 max. | | | | | | | | | | | | |
| Alarm/event settings | 5,000 max. | | | | | | | | | | | | |
| Expansion interface | For Expansion Interface Units | | | | | | | | | | | | |

*1. NS5-TQ series (high luminance TFT) luminance is better than that of NS5-SQ series by about 110 cd/m².

*2. Contact your nearest OMRON representative to replace the backlight.

*3. This is the estimated time before brightness is reduced by half at room temperature and humidity. It is not a guaranteed value.

The service life will be dramatically shortened if PT is used at low temperatures. For example, using the PT at temperatures of 0°C will reduce the service life to approximately 10,000 hours (reference value).

*4. The brightness cannot be adjusted much.

*5. 32-level adjustment is supported from the LotNo. 15Z0.

*6. This function does not indicate that the service life has been reached. It detects when the backlight is not lit due to a disconnection or other errors.

Backlight error detection indicates that all backlights (2) are OFF.

NS8/NS10/NS12/NS15

| Series | NS8-V2 | | | | NS10-V2 | | | | NS12-V2 | | | | NS15-V2 | | |
|--|---|---|--------------|--------------|---|---|---------------|---------------|---|---|---------------|---------------|--|---|--|
| Model | NS8-TV00-V2 | NS8-TV01-V2 | NS8-TV00B-V2 | NS8-TV01B-V2 | NS10-TV00-V2 | NS10-TV01-V2 | NS10-TV00B-V2 | NS10-TV01B-V2 | NS12-TS00-V2 | NS12-TS01-V2 | NS12-TS00B-V2 | NS12-TS01B-V2 | NS15-TX01S-V2 | NS15-TX01B-V2 | |
| Built-in Ethernet port | No | Yes | No | Yes | No | Yes | No | Yes | No | Yes | No | Yes | Yes | Yes | |
| Case color | Ivory | | Black | | Ivory | | Black | | Ivory | | Black | | Silver | Black | |
| Display device | High-definition TFT color LCD | | | | High-definition TFT color LCD | | | | High-definition TFT color LCD | | | | High-definition TFT color LCD | | |
| Effective display area | Width 170.9 × height 128.2 mm (8.4 inches) | | | | Width 215.2 × height 162.4 mm (10.4 inches) | | | | Width 246.0 × height 184.5 mm (12.1 inches) | | | | Width 304.1 × height 228.1 mm (15 inches) | | |
| Display colors | 256 colors | | | | | | | | | | | | | | |
| Number of dots | 640 dot horizontal × 480 dot vertical | | | | | | | | 800 dot horizontal × 600 dot vertical | | | | 1,024 dot horizontal × 768 dot vertical | | |
| View angle | Left/right: 65°, Top: 50°, Bottom: 60° | | | | Left/right: 60°, Top: 35°, Bottom: 65° | | | | Left/right: 60°, Top: 45°, Bottom: 75° | | | | Left/right: 80°, Top: 70°, Bottom: 60° | | |
| Screen data capacity | 60 Mbytes | | | | | | | | | | | | | | |
| Image data (BMP or JPG images) | 32,768 colors | | | | | | | | | | | | | | |
| Memory Card | Supported | | | | | | | | | | | | | | |
| Ladder Monitor function | Supported | | | | | | | | | | | | | | |
| Video Input Unit support | Supported (Image displayed via video input is 260,000 colors) | | | | | | | | | | | | (Only RGB input is enabled.) | | |
| Controller Link Interface Unit (Wired) support | Not supported | | | | Supported | | | | | | | | | | |
| Backlight *1 | Service life *2 | 50,000 hours min. | | | | | | | | | | | | | |
| | Brightness adjustment | There are 3 levels that can be set with the touch panel. *3 | | | | | | | | | | | Adjustable in steps using touch panel operation or stepless adjustment is possible using external variable Resistor (minimum brightness: 15 cd/m ²). | | |
| | Backlight error detection *4 | Error is detected automatically, and the RUN indicator flashes green as notification. | | | | | | | | | | | | | |
| Touch panel (matrix type) | Method | Matrix resistive membrane | | | | | | | | | | | Analog resistive membrane *5 | | |
| | Number of switches/resolution | 768 (32 horizontal × 24 vertical) 20 × 20 dots for each switch | | | | 1,200 (40 horizontal × 30 vertical) 16 × 16 dots for each switch | | | | 1,900 (50 horizontal × 38 vertical) 16 × 16 dots for each switch | | | | Resolution: 1,024 (horizontal) × 1,024 (vertical) | |
| | Input | Pressure-sensitive | | | | | | | | | | | | | |
| | Service life | 1,000,000 touch operations. | | | | | | | | | | | | | |
| Display text | Labels | Can be specified in CX-Designer. Font, style, and size can be specified. | | | | | | | | | | | | | |
| | Numerals, alarms, and character strings | Scalable Gothic: Magnification: 6 to 255 points Rough: Magnification: 1×1, 1×2, 2×1, 2×2, 3×3, 4×4, 8×8 Standard: Magnification: 1×1, 1×2, 2×1, 2×2, 3×3, 4×4, 8×8 Fine: Magnification: 1×1, 1×2, 2×1, 2×2, 3×3, 4×4, 8×8 7-segment display: Can display only numerals, dates, and times. | | | | | | | | | | | | | |
| | Supported languages (42 languages) | Scalable Gothic, rough, standard, and fine can be used for 42 languages. Japanese, simplified Chinese, traditional Chinese, Korean, English, French, German, Italian, Portuguese, Spain, Swedish, Dutch, Finnish, Norwegian, Basque, Catalan, Danish, Albanian, Croatian, Czech, Hungarian, Polish, Romanian, Slovak, Slovenian, Bulgarian, Belarusian, Russian, Serbian, Macedonian, Ukrainian, Georgian, Icelandic, Afrikaans, Faroese, Indonesian, Greek, Turkish, Estonian, Latvian, Lithuanian, Thai (supported only with scalable Gothic font) | | | | | | | | | | | | | |
| Text attributes | Color | 256 colors | | | | | | | | | | | | | |
| | Font style (only when vector font is specified) | Bold or italic | | | | | | | | | | | | | |
| | Vertical alignment | Top, center, or bottom | | | | | | | | | | | | | |
| | Horizontal alignment | Left-justified, centered, or right-justified | | | | | | | | | | | | | |
| Flicker | Objects supporting flicker | Functional objects: Select from up to 10 types of registered flicker settings. The flicker speed and flicker range can be set. Fixed objects: Select from three flicker types. | | | | | | | | | | | | | |
| Numeral units and scale settings | 1.000 max. | | | | | | | | | | | | | | |
| Alarm/event settings | 5,000 max. | | | | | | | | | | | | | | |
| Expansion interface | For Expansion Interface Units | | | | | | | | | | | | | | |

*1. Contact your nearest OMRON representative to replace the backlight.

*2. This is the estimated time before brightness is reduced by half at room temperature and humidity. It is not a guaranteed value.

The service life will be dramatically shortened if PT is used at low temperatures. For example, using the PT at temperatures of 0 °C will reduce the service life to approximately 10,000 hours (reference value).

*3. The brightness cannot be adjusted much.

*4. This function does not indicate that the service life has been reached. It detects when the backlight is not lit due to a disconnection or other errors. Backlight error detection indicates that all backlights (2) are OFF.

*5. An analog touch panel is used with the NS15. Do not press the touch panel in two or more places simultaneously.

If the touch panel is pressed in two or more places simultaneously, it may activate a switch between the points that are pressed.

Communications

NS5/NS8/NS10/NS12/NS15

| | | | |
|--|--------|-------------------------------|--|
| Memory Card | | Interface | One ATA-Compact Flash interface slot |
| | | Functions | Used to transfer and store screen data, store logging data, and store history data. (Alarm/Event History, Operation Log, and Error Log generated during Macro execution). |
| Serial Communications | Port A | Connector | Conforms to EIA RS-232C. D-Sub female 9-pin connector 5-V output (250 mA max.) through pin 6. The 5-V outputs of serial ports A and B cannot be used at the same time. |
| | | Functions | Host (PLC) access: 1:N NT Links (connections with CS/CJ/CP-series PLCs and C200HX/HG/HE(-Z) PLCs), 1:1 NT Links, or Host Link (connections with C Series or CVM1/CV-series PLCs) Direct access to Temperature Controllers using Smart Active Parts: CompoWay / F and bar code reader connections (Read directly from display.) |
| | Port B | Connector | Conforms to EIA RS-232C. D-Sub female 9-pin connector. 5-V output (250 mA max.) through pin 6. The 5-V outputs of serial ports A and B cannot be used at the same time. |
| | | Functions | Host (PLC) access: 1:N NT Links (connections with CS/CJ/CP-series PLCs and C200HX/HG/HE(-Z) PLCs) or 1:1 NT Links (connections with C Series or CVM1/CV-series PLCs) Direct access to Temperature Controllers using Smart Active Parts: CompoWay / F and bar code reader connections (Read directly from display.) |
| USB SLAVE Specifications | | USB rating | USB1.1 |
| | | Connector | TYPE-B (Slave) |
| | | Functions | Connection with the CX-Designer (for screen data transfers) Connecting to a PictBridge-compatible Printer Recommended printers: EPSON: PM-G4500, PX-G5300, PX-5600, EP-901F Canon: PIXUS MX7600, PIXUS iP100, PIXUS iX5000 |
| USB HOST Specifications *1 | | USB rating | USB1.1 |
| | | Connector | TYPE-A (Host) |
| | | Functions | Connection with a printer (for hard copies) Recommended printers: EPSON: PX-G930 |
| Built-in Ethernet Specifications *2 | | Conformance standards | Conforms to IEEE 802.3/Ethernet (10 Base-T/100 Base-TX). |
| | | Functions | Host (PLC) access and connection with the CX-Designer (for screen data transfers) |
| Controller Link (Wired-type) Specifications *3 | | Baud rate | 2 M/1 M/500 K bps |
| | | Transmission path | Shielded twisted-pair cable (special cable) |
| | | Functions | Host (PLC) access and data links |
| Video Input Specifications *4 | | Resolution | NS-CA001: 320×240, 640×480, 800×600 dots NS-CA002: User-defined size |
| | | Input signal | NS-CA001: NTSC composite video or PAL NS-CA002: NTSC composite video or PAL |
| | | Number of video inputs | NS-CA001: Number of cameras: 4 max. NS-CA002: 2 cameras + RGB |

*1. Except NS5.

*2. NS□-□□□1-V2 only.

*3. Except NS5 and NS8.

*4. Except NS5 and NS15. NS15 provides RGB input. (NS-CA002)

Connectable Devices

Supported OMRON PLCs

| PLC series | PLC model name | RS-232C *1 | | | Ethernet | | Controller Link *4 |
|----------------|-----------------|------------|--------|-----------|----------|----------------|--------------------|
| | | 1:1 | 1:N | Host Link | FINS *2 | EtherNet/IP *3 | |
| C Series | CQM1 | Yes | No | Yes | No | No | No |
| | CQM1H | Yes | Yes | Yes | No | No | Yes |
| | CPM1 | Yes | No | Yes | No | No | No |
| | CPM1A | Yes | No | No | No | No | No |
| | CPM2A | Yes | No | Yes | No | No | No |
| | CPM2C | Yes | No | Yes | No | No | No |
| | C200HS | Yes | No | Yes | No | No | No |
| | C200HE (-Z) | Yes | Yes | Yes | No | No | Yes |
| | C200HG (Z) | Yes | Yes | Yes | No | No | Yes |
| C200HX (-Z) | Yes | Yes | Yes | No | No | Yes | |
| CVM1/CV Series | CV500/1000/2000 | Yes | No | Yes | Yes | No | Yes |
| | CVM1 | Yes | No | Yes | Yes | No | Yes |
| CS Series | CS1H | No | Yes | Yes | Yes | Yes | Yes |
| | CS1G | No | Yes | Yes | Yes | Yes | Yes |
| | CS1D | No | Yes | Yes | Yes | Yes | Yes |
| CJ Series | CJ1H | No | Yes | Yes | Yes | Yes | Yes |
| | CJ1G | No | Yes | Yes | Yes | Yes | Yes |
| | CJ1M | No | Yes | Yes | Yes | Yes | Yes |
| | CJ2H | No | Yes | Yes | Yes | Yes | Yes |
| | CJ2M | No | Yes | Yes | Yes | Yes | Yes |
| CP Series | CP1H | No | Yes | Yes | Yes | Yes | No |
| | CP1L | No | Yes | Yes | Yes | No | No |
| | CP1E | No | Yes | Yes | No | No | No |
| NJ Series | NJ5 | Yes *5 | Yes *5 | Yes *5 | No | Yes | No |

*1. To connect a NS with a PLC via a RS-422A connection, OMRON's NS-AL002, or CJ1W-CIF11 RS-232C/RS-422A Converter can be used to convert the RS-232C port on the NS to RS-422A.

*2. A NS with Ethernet port is necessary.

When connecting a PLC with the NS, an Ethernet port is necessary on the PLC, too. Use a PLC CPU Unit with a built-in Ethernet port, or add an Ethernet Unit.

*3. A NS with Ethernet port is necessary.

When connecting a PLC with the NS, an EtherNet/IP port is necessary on the PLC, too. Use a PLC CPU Unit with a built-in EtherNet/IP port, or add an EtherNet/IP Unit.

*4. Install a Controller Link Interface Unit on the NS. A Controller Link Unit is necessary for the PLC.

*5. Mount a Serial Communications Unit on the NJ-series Controller. A NS can access only to the Controller's memory used for CJ-series unit.

Function Comparison

| PLC series | PLC model name | Ladder Monitor | Device Monitor/ Switch Box | PLC Data Trace | SPMA | SAP | EtherNet/IP Tag access (Network symbols) | PLC Troubleshooter | NJ Troubleshooter |
|----------------|-----------------|----------------|-------------------------------|----------------|--------|--------|--|--------------------|-------------------|
| C series | CQM1 | No | No | No | No | No | No | No | No |
| | CQM1H | No | No | No | No | No | No | No | No |
| | CPM1 | No | No | No | No | No | No | No | No |
| | CPM1A | No | No | No | No | No | No | No | No |
| | CPM2A | No | No | No | No | No | No | No | No |
| | CPM2C | No | No | No | No | No | No | No | No |
| | C200HS | No | No | No | No | No | No | No | No |
| | C200HE (-Z) | No | No | No | No | No | No | No | No |
| | C200HG (-Z) | No | No | No | No | No | No | No | No |
| C200HX (-Z) | No | No | No | No | No | No | No | No | |
| CVM1/CV series | CV500/1000/2000 | No | No | No | No | No | No | No | No |
| | CVM1 | No | No | No | No | No | No | No | No |
| CS series | CS1H | Yes | Yes | Yes | Yes | Yes | No | Yes | No |
| | CS1G | Yes | Yes | Yes | Yes | Yes | No | Yes | No |
| | CS1D | Yes | Yes | Yes | Yes | Yes | No | Yes | No |
| CJ series | CJ1H | Yes | Yes | Yes | Yes | Yes | No | Yes | No |
| | CJ1G | Yes | Yes | Yes | Yes | Yes | No | Yes | No |
| | CJ1M | Yes | Yes | Yes | Yes | Yes | No | Yes | No |
| | CJ2H | Yes | Yes | Yes | Yes | Yes | Yes | Yes | No |
| | CJ2M | Yes | Yes | Yes | Yes | Yes | Yes | Yes | No |
| CP series | CP1H | Yes | Yes | Yes | Yes *1 | Yes | No | No | No |
| | CP1L | Yes | Yes | Yes | Yes *1 | Yes | No | No | No |
| | CP1E | No | No | No | Yes *1 | Yes | No | No | No |
| NJ series | NJ5 | No | Yes *2 | No | No | Yes *3 | Yes | No | Yes |

*1. The SPMA relaying a PLC is not supported.

*2. Only Device Monitor function is supported. Monitoring function that uses tags (variables) is not supported.

*3. The SAP for CJ-series Special I/O Units and CPU Bus Units that can be used with NJ-series Controller is supported.

Connectable Inverters

| Series | Communication Unit | Connection | |
|--------|--|-----------------|-----|
| 3G3MX2 | (Use the RS-485 terminal on the Inverter) | RS-485 (2-wire) | 1:N |
| 3G3JX | (Use the RS-485 connector on the Inverter) | | |
| 3G3RX | (Use the RS-485 terminal on the Inverter) | | |

Connectable Temperature Controllers

The following Temperature Controllers can be connected directly to an NS-series PT*.

| Unit name | Series | Model | Remarks |
|--|---------------------------------------|---|----------------------------|
| Modular Temperature Controller | EJ1 | EJ1-EDU End Unit | |
| Modular Temperature Controller | E5ZN | E5ZN-SCT24S Terminal Unit | |
| Digital Controller | E5AR | E5AR-□□□□□□□□□□-FLK | |
| | E5ER | E5ER-□□□□□□□□□□-FLK | |
| Temperature Controller (Digital Controller) | E5AN/E5EN/E5CN (Basic Model) | E5CN-□□□□□□T-FLK Multi-input (Thermocouple/Resistance Thermometer) Type | SAP screens are available. |
| | | E5CN-□□□□□□L-FLK Analog Input Type | |
| | | E5EN-□□□□□□T-FLK Multi-input (Thermocouple/Resistance Thermometer) Type | |
| | | E5EN-□□□□□□L-FLK Analog Input Type | |
| | | E5AN-□□□□□□T-FLK Multi-input (Thermocouple/Resistance Thermometer) Type | |
| | | E5AN-□□□□□□L-FLK Analog Input Type | |
| | E5AN-H/E5EN-H/E5CN-H (Advanced Model) | E5CN-H□□□□□□□□□□-FLK Universal-input Model | |
| | | E5EN-H□□□□□□□□□□-FLK Universal-input Model | |
| | | E5AN-H□□□□□□□□□□-FLK Universal-input Model | |
| | E5GN | E5GN-□□□□TC-FLK Thermocouple Input Type | |
| E5GN-□□□□P-FLK Resistance Thermometer Input Type | | | |

* The NS-Runtime cannot be connected directly to a Temperature Controller.

Connecting to Another Company's PLC

| Manufacturer | Series | CPU | Communication Unit/Adapter/Board | Connection diagram | | |
|-----------------------------|-------------------|---|---|--|-------------------------|-----|
| Mitsubishi Electric | A Series | A1SHCPU A2USCPU A2USHCPU-S1 | Computer Link Unit A1SJ71UC24-R□ A1SJ71UC24-PRF | RS-232C, RS422A/485 *1 | 1:1 | |
| | | A2ACPU | Computer Link Unit AJ71UC24 | | | |
| | FX Series | FX0N FX1S FX1N FX1NC FX2N FX3UC FX3G | Communication special adapter FX3U-232-ADP FX2NC-232ADP FX0N-232-ADP | RS-232C, RS422A/485 *1 | 1:1 | |
| | | | Communication expansion board FX□□-232-BD | | | |
| | Q/QnA Series | Q00CPU Q01CPU | RS-232C port on the CPU Module | RS-232C | 1:1 | |
| | | Q00CPU Q01CPU Q00JCPU Q02CPU Q02HCPU Q06HCPU Q12HCPU Q25HCPU Q03UDCPU Q06UDHCPU Q13UDHCPU | Serial Communications Module QJ71C24N-R2 QJ71C24N-R4 QJ71C24N | RS-232C, RS-485 (4-wire) *2 | 1:N | |
| | | Q2ASCPU Q2ASCPU-S1 Q2ASHCPU Q2ASHCPU-S1 | Serial Communications Module A1SJ71QC24N | | | |
| | | | | | | |
| | Yokogawa Electric | FA-M3(R) Series | F3SC23-1F F3SP21-0N F3SP28-3S F3SP58-6S F3SP67-6S | CPU built-in RS-232C port | RS-232C | 1:1 |
| | | | | Personal Computer Link Module F3LC11-1F F3LC12-1F F3LC11-2F | RS-232C, RS-422A/485 *1 | |
| Siemens | S7-300 Series | CPU313 CPU315-2DP CPU317-2PN/DP | SIMATIC S7 HMI Adapter 6ES7 972-0CA1□-0XA0 | RS-232C | 1:1 | |
| Rockwell (Allen-Bradley) | SLC500 | SLC5/03 SLC5/04 SLC5/05 | RS-232C port on the CPU Module | RS-232C | 1:1 | |
| | MicroLogix | MicroLogix 1500 | RS-232C port on the CPU Module | RS-232C | 1:1 | |
| | ControlLogix | Logix5555 | RS-232C port on the CPU Module | RS-232C | 1:1 | |
| | CompactLogix | 1769-L31 | RS-232C port on the CPU Module | RS-232C | 1:1 | |
| | PLC-5 | PLC-5/20 | RS-232C port or RS-485 port on the CPU Module | RS-232C/RS-485 (4-wire) | 1:N | |


*1. To connect using RS-422A/485, an RS-232C/422A converter (e.g. NS-AL002, CJ1W-CIF11) is required.

*2. To connect using RS-485, an RS-232C/422A converter (e.g. NS-AL002, CJ1W-CIF11) is required.


Up to 32 sequencers can be connected when using RS-485.

Component Names and Options


NS15

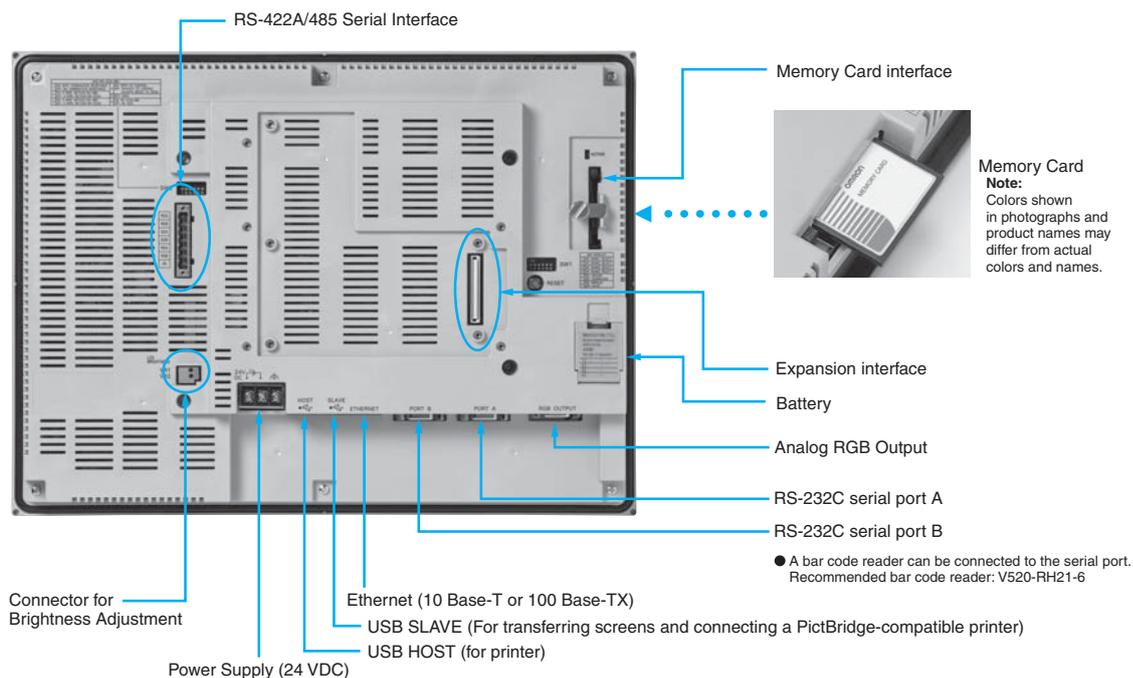

NS12/10

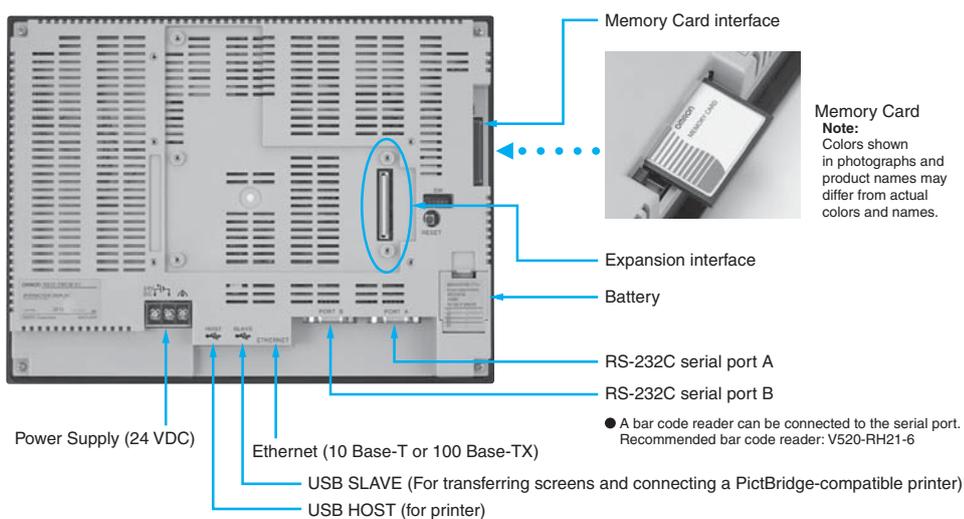

NS8

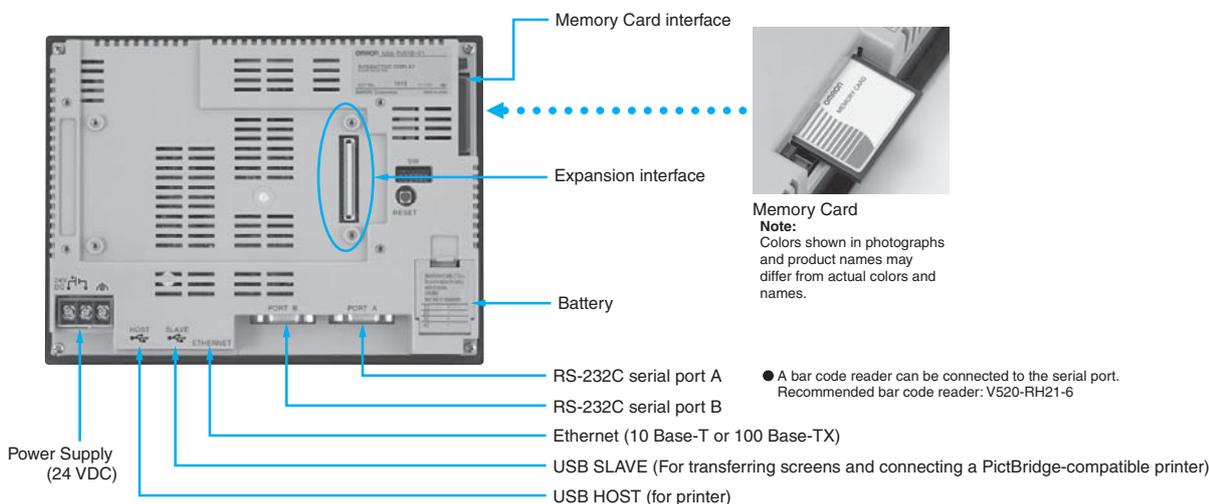

Design

Startup/Operation

Maintenance

NS-Runtime

Hand-held PT

Features


Network

System Configuration


Ordering Information

Specifications


NS5

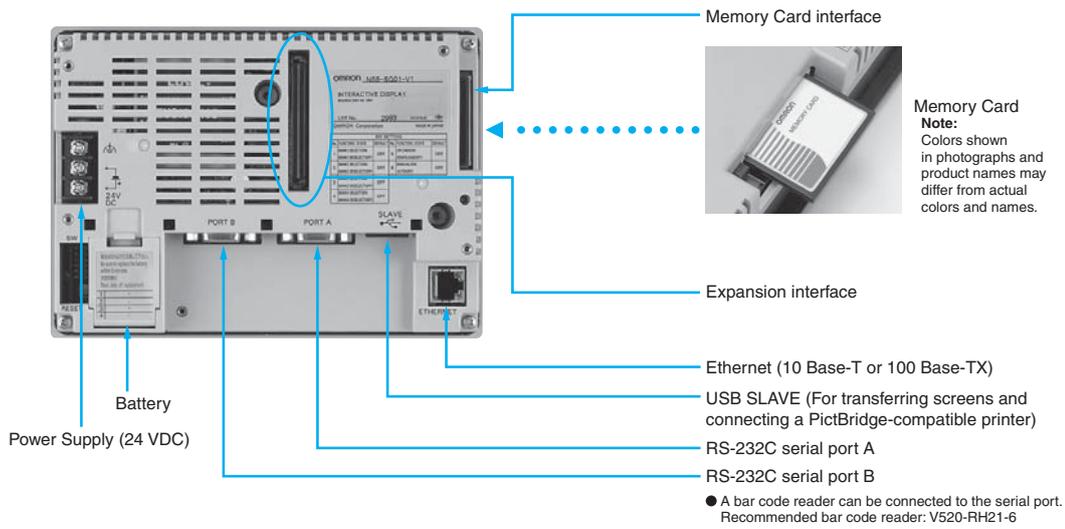


NSH5

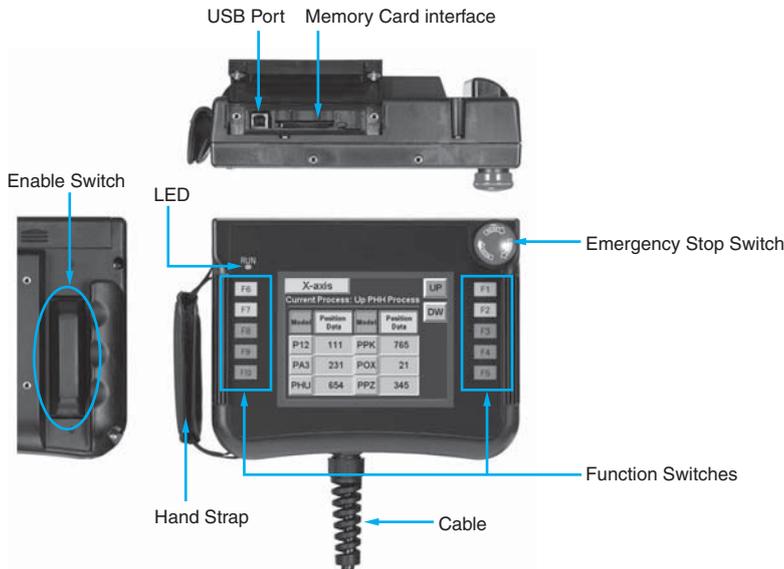


Optional Products

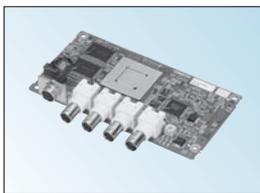

Video Input Unit
NS-CA001 (with Cover)

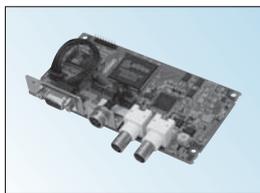

RGB/Video Input Unit
NS-CA002 (with Cover)

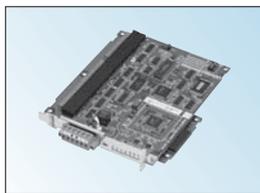

Controller Link Interface Unit
NS-CLK21 (with Cover)




RS-422A Adapter
CJ1W-CIF11



RS-232C/RS-422A
Conversion Unit
NS-AL002



Communications Cable
XW2Z-S002

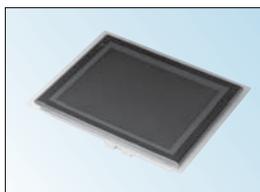

Protective Cover/Anti-reflection
Sheet for NS-series PT
NS-KBA0 (N)
NT30/NT31C-KBA05 (N)



USB Serial Conversion Cable
CS1W-CIF31



USB relay cable
(IP65 oil-proof type)
NS-USBEXT-1M

Dimensions

Design

Startup/Operation

Maintenance

NS-Runtime

Hand-held PT

Features


Network

System Configuration


Ordering Information

Specifications


NS15

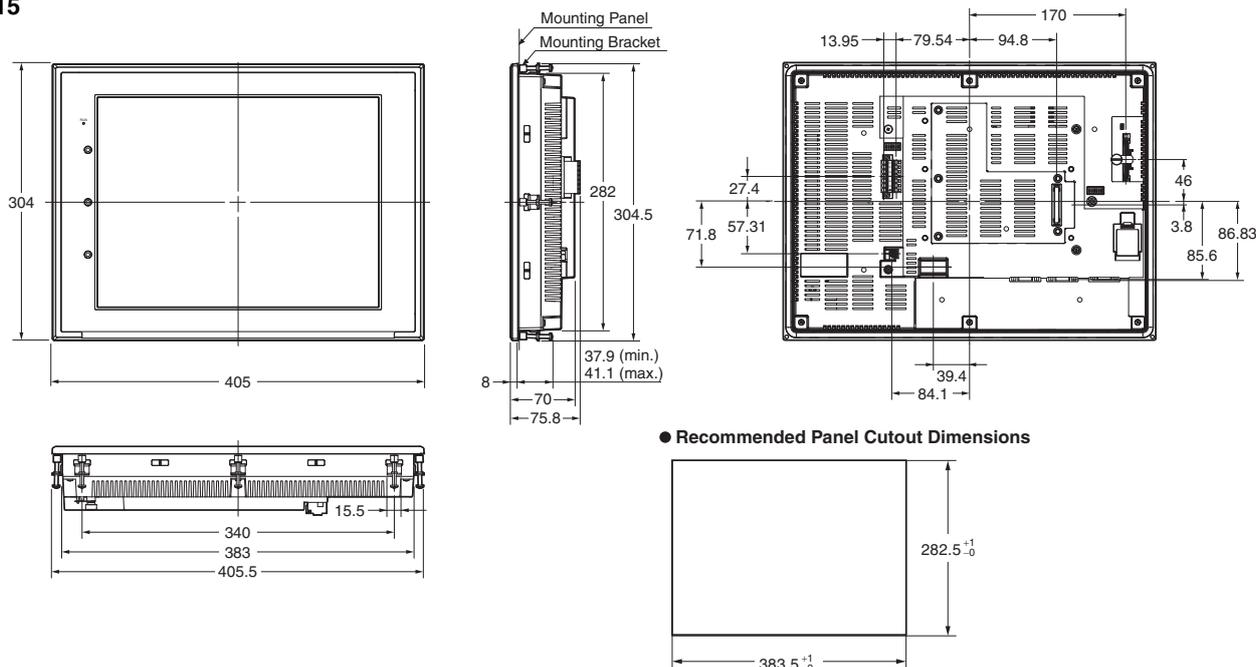


NS12/10

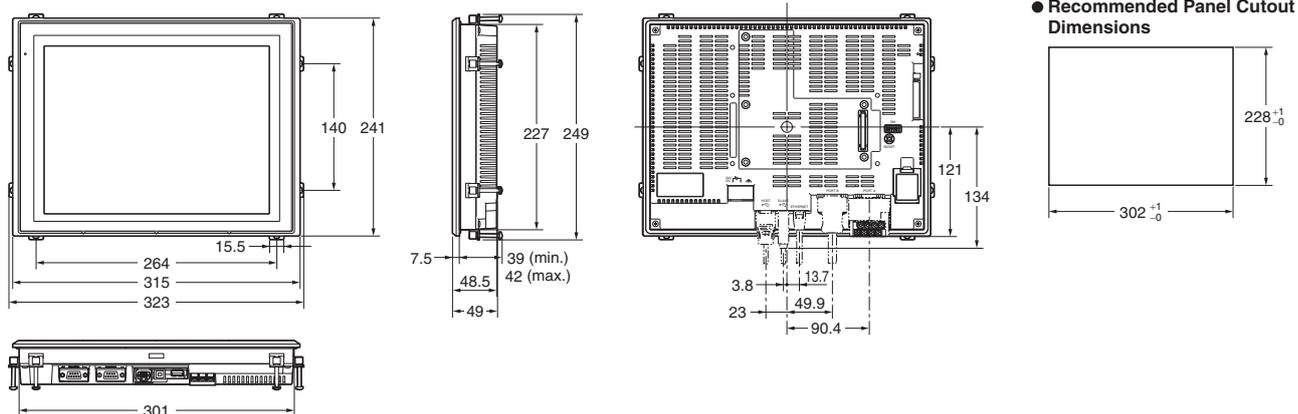


NS8

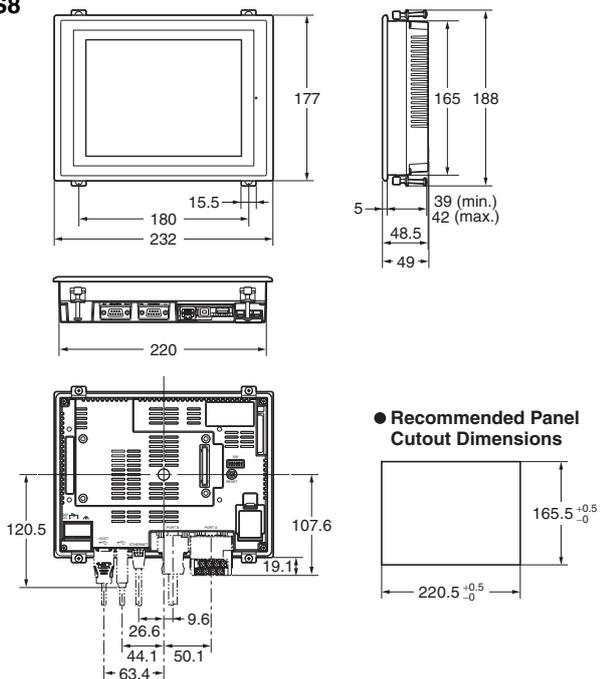


NS5

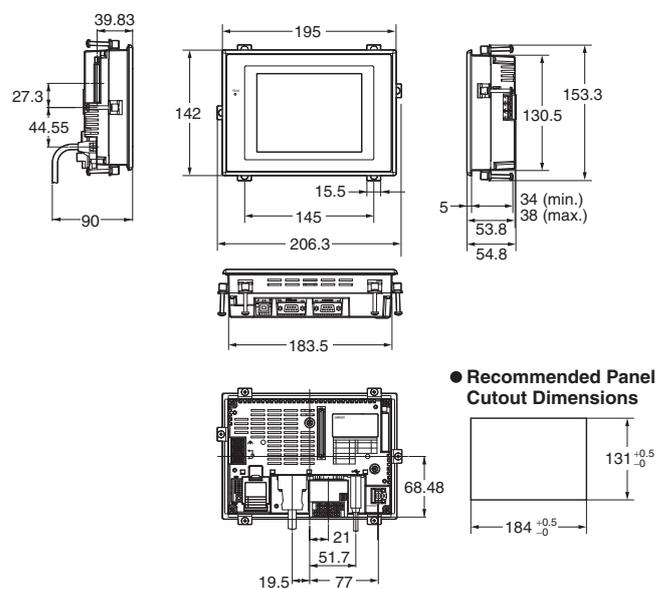


Hand-held NS5

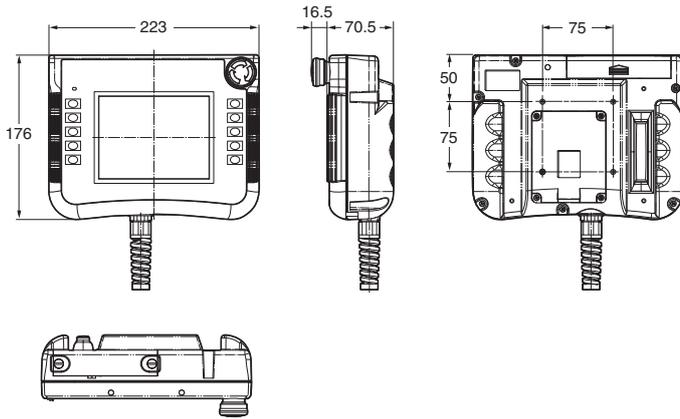


NS-CA001 Video Input Unit

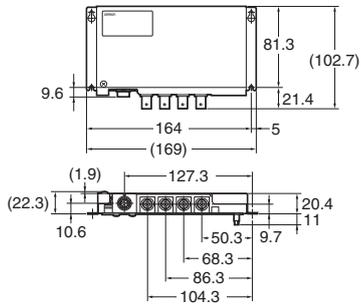

NS-CA002 Video Input Unit

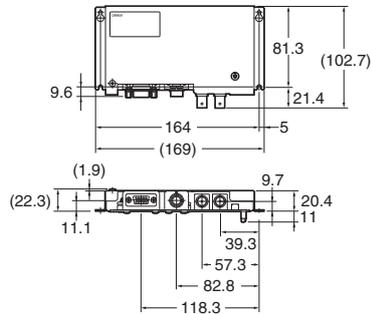

NS-CLK21 Controller Link Interface Unit

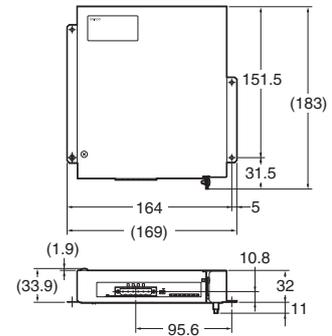

Related Manuals

| Cat. No. | Model | Manual |
|----------|------------------------|--|
| V083 | NS15/NS12/NS10/NS8/NS5 | NS-Series Programmable Terminals SETUP MANUAL |
| V073 | NS15/NS12/NS10/NS8/NS5 | NS-Series Programmable Terminals PROGRAMMING MANUAL |
| V099 | NS-CXDC1-V3 | CX-Designer Ver.3.0 USER'S MANUAL |
| V082 | NS | NS-Series Ladder Monitor OPERATION MANUAL (Ladder Monitor I/O Comment Extracting Tool) |
| V086 | NS-CA002 | NS-Series RGB and Video Input Unit OPERATION MANUAL |
| V090 | NSH5 | NSH5-Series Hand-held Programmable Terminal OPERATION MANUAL |
| V098 | NS15/NS12/NS10/NS8/NS5 | NS-Series Programmable Terminals HOST CONNECTION MANUAL (Host Link) OPERATION MANUAL |
| V085 | NS15/NS12/NS10/NS8/NS5 | NS-Series Programmable Terminals HOST CONNECTION MANUAL |
| V092 | NS15/NS12/NS10/NS8/NS5 | NS-Series Programmable Terminals HOST CONNECTION MANUAL Multivendor Connection |
| V075 | NS15/NS12/NS10/NS8/NS5 | NS-Series Programmable Terminals Macro Reference |
| V093 | NS-NSRCL□□ | NS-NSRCL□□ NS-Runtime Software USERS MANUAL |

Read and Understand this Catalog

Please read and understand this catalog before purchasing the product. Please consult your OMRON representative if you have any questions or comments.

y

Warranty and Limitations of Liability

WARRANTY

OMRON's exclusive warranty is that the products are free from defects in materials and workmanship for a period of one year (or period if specified) from date of sale by OMRON.

other

OMRON MAKES NO WARRANTY OR REPRESENTATION, EXPRESS OR IMPLIED, REGARDING NON-INFRINGEMENT, MERCHANTABILITY, OR FITNESS FOR PARTICULAR PURPOSE OF THE PRODUCTS. ANY BUYER OR USER ACKNOWLEDGES THAT THE BUYER OR USER ALONE HAS DETERMINED THAT THE PRODUCTS WILL SUITABLY MEET THE REQUIREMENTS OF THEIR INTENDED USE. OMRON DISCLAIMS ALL OTHER WARRANTIES, EXPRESS OR IMPLIED.

LIMITATIONS OF LIABILITY

OMRON SHALL NOT BE RESPONSIBLE FOR SPECIAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, LOSS OF PROFITS OR COMMERCIAL LOSS IN ANY WAY CONNECTED WITH THE PRODUCTS, WHETHER SUCH CLAIM IS BASED ON CONTRACT, WARRANTY, NEGLIGENCE, OR STRICT LIABILITY.

In no event shall the responsibility of OMRON for any act exceed the individual price of the product on which liability is asse

rted.

IN NO EVENT SHALL OMRON BE RESPONSIBLE FOR WARRANTY, REPAIR, OR OTHER CLAIMS REGARDING THE PRODUCTS UNLESS OMRON'S ANALYSIS CONFIRMS THAT THE PRODUCTS WERE PROPERLY HANDLED, STORED, INSTALLED, AND MAINTAINED AND NOT SUBJECT TO CONTAMINATION, ABUSE, MISUSE, OR INAPPROPRIATE MODIFICATION OR REPAIR.

Application Considerations

SUITABILITY FOR USE

OMRON shall not be responsible for conformity with any standards, codes, or regulations that apply to the combination of the pr

oduct in the

customer's application or use of the product.

Take all necessary steps to determine the suitability of the product for the systems, machines, and equipment with which it wil

l be used.

Know and observe all prohibitions of use applicable to this product.

NEVER USE THE PRODUCT FOR AN APPLICATION INVOLVING SERIOUS RISK TO LIFE OR PROPERTY WITHOUT ENSURING THAT THE SYSTEM AS A WHOLE HAS BEEN DESIGNED TO ADDRESS THE RISKS, AND THAT THE OMRON PRODUCT IS PROPERLY RATED AND INSTALLED FOR THE INTENDED USE WITHIN THE OVERALL EQUIPMENT OR SYSTEM.

PROGRAMMABLE PRODUCTS

OMRON shall not be responsible for the user's programming of a programmable product, or any consequence thereof.

Disclaimers

CHANGE IN SPECIFICATIONS

Product specifications and accessories may be changed at any time based on improvements and other reasons. Consult with your OM

RON

representative at any time to confirm actual specifications of purchased product.

DIMENSIONS AND WEIGHTS

Dimensions and weights are nominal and are not to be used for manufacturing purposes, even when tolerances are shown.

PERFORMANCE DATA

Performance data given in this catalog is provided as a guide for the user in determining suitability and does not constitute a

warranty. It
performance

may represent the result of OMRON's test conditions, and the users must correlate it to actual application requirements. Actual

is subject to the OMRON Warranty and Limitations of Liability.

Note: Do not use this document to operate the Unit.



3gfZad[eW 6[efdTgfad,ž

ASH & ALAIN INDIA PVT LTD

S-100, F.I.E.E., Okhla Industrial Area, Phase-ii, New Delhi-110020(India)

Tel : 011-43797575 Fax : 011-43797574 E-mail : sales@ashalain.com